

# Operation Guide 3407

CASIO®

Congratulations upon your selection of this CASIO watch.

Bluetooth® is a registered trademark or trademark of Bluetooth SIG, Inc. of the United States.

E-1

## Mobile Link Function

This product includes functions that allow it to communicate with Bluetooth® 4.0 (referred to as "Bluetooth" in this manual) capable mobile phones and other devices, to sound an alert tone, perform vibration alert, and display alerts when a phone call and/or mail is received on your phone, etc. (Mobile Link Function)

- This product complies with or has received approval under radio laws in various countries and geographic areas. Use of this product in an area where it does not conform to or where it has not been approved under applicable radio laws may be punishable under local laws. For details, see the separate "List of Countries and Geographic Areas where Product Conforms to Radio Laws or Has Been Approved".
- Use of this product inside of an aircraft is restricted by the aviation laws of each country. Be sure to obey instructions provided by flight personnel concerning use of devices such as this product.
- For Mobile Link operational procedures and a Q&A, go to the website below. CASIO website: <http://world.g-shock.com/ble/guide/>

E-2

## ◆ Timer ..... Page E-38

The timer counts down from a preset start time, and the watch sounds a tone or vibrates when the countdown reaches zero.

E-4

|                                                  |             |
|--------------------------------------------------|-------------|
| To configure the Summer Time (DST) setting ..... | E-26        |
| <b>Alarms and Hourly Time Signal .....</b>       | <b>E-28</b> |
| To enter the Alarm Mode.....                     | E-28        |
| To change an alarm setting .....                 | E-30        |
| To stop a tone/vibration alert operation .....   | E-34        |
| To test the alarm.....                           | E-34        |
| <b>Stopwatch .....</b>                           | <b>E-35</b> |
| To enter the Stopwatch Mode.....                 | E-35        |
| To measure time with the stopwatch .....         | E-36        |
| <b>Timer .....</b>                               | <b>E-38</b> |
| To enter the Timer Mode.....                     | E-38        |
| To set the timer start time .....                | E-39        |
| To perform a countdown.....                      | E-40        |
| To stop a tone/vibration alert operation .....   | E-41        |

E-6

## About this User's Guide

### Display Types

Depending on the model of your watch, display text appears either as dark figures on a light background or light figures on a dark background. All sample displays in this manual are shown using dark figures on a light background.

- Note that the display style of a watch is fixed. You cannot switch between styles.



E-8

## Features

Your watch provides you with the features and functions described below.

### ◆ Communication with your mobile phone ..... Visit the CASIO website

Connect with a Bluetooth enabled mobile phone and communicate with it. For more information, visit the "User's Guide for Mobile Link Functions" page at the CASIO website.

### ◆ World Time ..... Page E-24

Instantly view the current time in 100 cities around the globe.

### ◆ Alarms ..... Page E-28

The watch can be configured to sound a tone or vibrate when a preset alarm time is reached.

### ◆ Stopwatch..... Page E-35

The stopwatch measures elapsed time up to 24 hours in 1/100-second increments.

E-3

## Contents

|                                                           |             |
|-----------------------------------------------------------|-------------|
| <b>Features .....</b>                                     | <b>E-3</b>  |
| <b>About this User's Guide.....</b>                       | <b>E-8</b>  |
| Display Types .....                                       | E-8         |
| Tap Operations.....                                       | E-9         |
| Button Names and Display Indications.....                 | E-10        |
| Display Indicators .....                                  | E-12        |
| <b>Using Modes .....</b>                                  | <b>E-14</b> |
| Mode Overview.....                                        | E-16        |
| <b>Adjusting the Time Setting .....</b>                   | <b>E-18</b> |
| Configuring Current Time and Date Settings Manually ..... | E-19        |
| <b>World Time.....</b>                                    | <b>E-24</b> |
| To view the times in other time zones .....               | E-24        |
|                                                           | E-5         |

|                                                   |             |
|---------------------------------------------------|-------------|
| <b>Setup .....</b>                                | <b>E-42</b> |
| Configuring Option Settings .....                 | E-43        |
| <b>Button Operation Tone .....</b>                | <b>E-51</b> |
| To turn the button operation tone on or off ..... | E-51        |
| <b>Illumination.....</b>                          | <b>E-54</b> |
| To illuminate the display .....                   | E-54        |
| To specify the illumination duration.....         | E-55        |
| <b>Low Battery Indication.....</b>                | <b>E-57</b> |
| <b>Demo Mode.....</b>                             | <b>E-59</b> |
| <b>Specifications .....</b>                       | <b>E-60</b> |

E-7

## Tap Operations

The word "tap" in this manual refers to striking the center of watch display with your fingertip.

### Example:


Tap twice to stop an ongoing tone or vibration alert for a watch alarm.

### How to tap:

Lightly strike the watch display twice with the tip of your finger. (double-tap)

### Important!

- The tap function is enabled only while the Tap indicator is flashing on the watch display.
- The Tap indicator flashes automatically whenever the tap function is enabled and can be used to stop an incoming call tone/vibration alert on the phone, to stop a watch alarm or time up alert, etc.

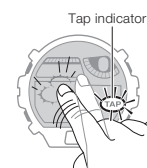


E-9

## Button Names and Display Indications

Operations on this watch are performed using buttons (A) through (D), and the (L) button. The illustration below shows the locations and the meanings of the different buttons and display indicators.


See "Using Modes" (page E-14).

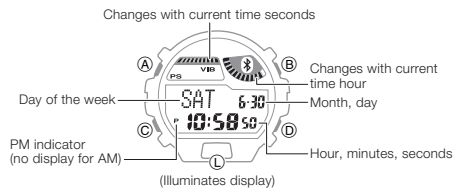

E-10

E-11

## Display Indicators

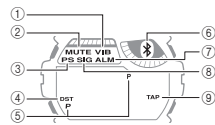

| Number | Name                   | Meaning                                                   | More Info      |
|--------|------------------------|-----------------------------------------------------------|----------------|
| ①      | Vibration indicator    | Vibration alert enabled for alarms/timer.                 | E-50           |
| ②      | MUTE indicator         | Button operation tone disabled.                           | E-52           |
| ③      | Power Saving indicator | Mobile Link functions availability limited to save power. | CASIO website* |
| ④      | DST indicator          | Summer time enabled (time advanced by one hour).          | E-26           |

E-12


E-13

| Number | Name                         | Meaning                                          | More Info      |
|--------|------------------------------|--------------------------------------------------|----------------|
| ⑤      | PM indicator                 | Indicates p.m. times during 12-hour timekeeping. | E-10           |
| ⑥      | Bluetooth icon               | Mobile Link functions enabled.                   | CASIO website* |
| ⑦      | Alarm indicator              | Alarm is turned on.                              | E-32           |
| ⑧      | Hourly time signal indicator | Hourly time signal is turned on.                 | E-32           |
| ⑨      | Tap indicator (flashing)     | Double-tap operation is enabled.                 | E-9            |

\* Visit the "User's Guide for Mobile Link Functions" page of the CASIO website.

## Using Modes

Each press of (C) cycles between modes as shown in the illustration below.

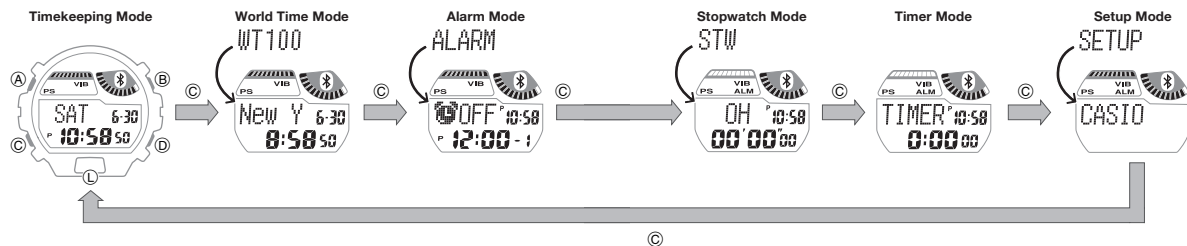

E-14

E-15

## Mode Overview

| Mode             | Functions                                                                                                                                                                      | More Info    |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| Timekeeping Mode | <ul style="list-style-type: none"> <li>Current time display</li> <li>Time, date, summer time settings; 12/24-hour display switching</li> <li>Manual time adjustment</li> </ul> | E-14<br>E-18 |
| World Time Mode  | <ul style="list-style-type: none"> <li>Current time in 100 cities (35 time zones) around the globe</li> </ul>                                                                  | E-24         |
| Alarm Mode       | <ul style="list-style-type: none"> <li>Alarm time and on/off settings</li> <li>Hourly time signal on/off</li> </ul>                                                            | E-28         |
| Stopwatch Mode   | <ul style="list-style-type: none"> <li>Elapsed time measurement</li> </ul>                                                                                                     | E-35         |
| Timer Mode       | <ul style="list-style-type: none"> <li>Start time settings; countdown</li> </ul>                                                                                               | E-38         |
| Setup Mode       | <ul style="list-style-type: none"> <li>For configuring duration, method, and other settings for alerts from the phone</li> <li>Alarm/timer alert method settings</li> </ul>    | E-42         |

E-16

E-17


## Adjusting the Time Setting

When Mobile Link is enabled, the watch's time and date settings are automatically adjusted to match those of the phone. When Mobile Link is disabled, you should adjust the time and date settings manually.

## Configuring Current Time and Date Settings Manually

### To configure time and date settings

- In the Timekeeping Mode, hold down (A) for about two seconds until the time zone setting screen appears.

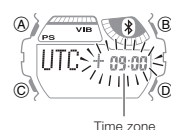

Time zone


[SET Hold] will appear on the watch display, followed by the time zone setting screen.

E-18

E-19

## 2 Use **C** to select the item whose setting you want to change.

Each press of **C** cycles through available settings in the sequence shown below.

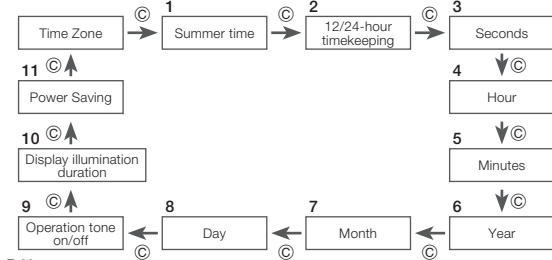

E-20

## Note

- The numbers in the above diagram indicate how many times you need to press **C** to display each setting.
- Power Saving is a function that saves power by limiting the availability of Mobile Link functions. For more information, visit the "User's Guide for Mobile Link Functions" page at the CASIO website.

E-21

## 3 Use **B** and **D** to change the currently selected setting as described below.

| Screen      | Setting                                                                              | Operation                   |
|-------------|--------------------------------------------------------------------------------------|-----------------------------|
| UTC + 09:00 | Time zone of the city where you will use the watch                                   | Use <b>B</b> and <b>D</b> . |
| ON          | Summer time on/off                                                                   | Press <b>D</b> .            |
| 12H         | 12-hour (12H)/24-hour (24H) timekeeping switching                                    | Press <b>D</b> .            |
| 50          | Seconds 00-reset<br>• From 30 to 59 seconds, resetting adds 1 to the minute setting. | Press <b>D</b> .            |
| 10:58       | Hour and minutes settings                                                            | Use <b>B</b> and <b>D</b> . |
| 2012 6:30   | Year, month, day settings                                                            | Use <b>B</b> and <b>D</b> . |

E-22

## Note

- Refer to the "City Name List" (back of this manual) to determine the time zone of the city where you will be using the watch.
- Summer time, or Daylight Saving Time (DST) as it is known in some countries, calls for setting clocks ahead one hour from standard time during the summer season. Note that the period during which and the areas where summer time is applied depend on each country. Some countries or geographic areas may not use summer time.
- The DST indicator will be on the display and timekeeping will be advanced by one hour when summer time is turned on.
- The watch's Full Auto Calendar automatically makes adjustments in the day setting to account for different length months and leap year.

## 4 After all the settings are the way you want, press **A** to return to the Timekeeping Mode.


E-23

## World Time

World Time lets you display the current time in any one of 100 cities (35 time zones) around the world.

### To view the times in other time zones

#### 1 In the Timekeeping Mode, press **C** to enter the World Time Mode.

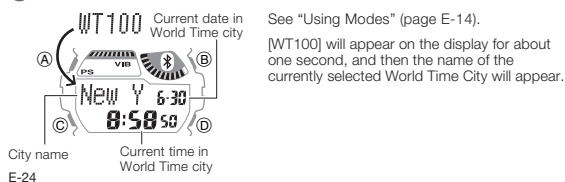

E-24

## Note

If you do not perform any operation for about two or three minutes while in the World Time Mode, the watch will automatically return to the Timekeeping Mode.

#### 2 Use **B** and **D** to scroll through the World Time Mode city names.


- See "City Name List" (back of this manual).
- Scrolling to a city name displays the current time in that city.
- Holding down either button scrolls at high speed.
- To display the UTC city name (UTC offset 0), press **B** and **D** at the same time.
- Pressing **A** causes the currently selected city name to scroll across the display from the beginning of the name.

#### 3 To return to the Timekeeping Mode, press **C** five times.

E-25

### To configure the Summer Time (DST) setting

#### 1 In the World Time Mode, hold down **A** for about two seconds.



DST indicator

#### Important!

Even when Mobile Link is enabled, you need to turn the summer time (DST) on or off manually for World Time.

## Note

- Summer time, or Daylight Saving Time (DST) as it is known in some countries, calls for setting clocks ahead one hour from standard time during the summer season. Note that the period during which and the areas where summer time is applied depend on each country. Some countries or geographic areas may not use summer time.
- The DST indicator will be on the display and timekeeping will be advanced by one hour when summer time is turned on.
- The summer time setting cannot be changed for the UTC World Time zone.
- The summer time setting is applied to the currently selected time zone only. A setting configured for one time zone does not affect any other time zone.

E-26

E-27

## Alarms and Hourly Time Signal

You can set up to five different alarms. When any one of the alarm times is reached the watch will sound an alarm tone or vibrate for about 10 seconds. The hourly time signal causes the watch to sound a tone or vibrate every hour on the hour.

See "f. Alert method for alarm/timer" (page E-50).


### To enter the Alarm Mode

#### 1 In the Timekeeping Mode, press **C** twice to enter the Alarm Mode.

See "Using Modes" (page E-14).

[ALARM] will appear on the display for about one second. After that, an alarm setting screen (Alarm 1 through Alarm 5, or hourly time signal) will appear.

E-28

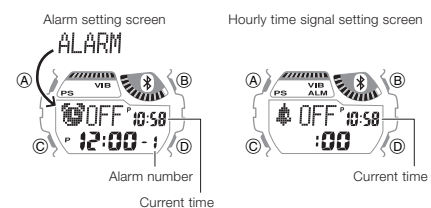


## Note

If you do not perform any operation for about two or three minutes while in the Alarm Mode, the watch will automatically return to the Timekeeping Mode.

E-29

## To change an alarm setting

- In the Alarm Mode, use **(D)** to select the alarm whose setting you want to change.

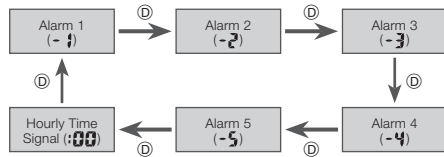

E-30

- Use **(B)** to select the alarm type or to toggle the hourly time signal between on and off.

### Alarm Types

**OFF** : Alarm does not sound.

**1TIME** : Alarm sounds only once at the preset time and does not sound again after that.


**DAILY** : Alarm sounds at the preset time each day.

### Hourly time signal

**OFF** : Hourly time signal does not sound.

**ON** : Hourly time signal sounds every hour on the hour.

The Alarm indicator is displayed while an alarm is turned on, while the Hourly time signal indicator is displayed while the hourly time signal is turned on.

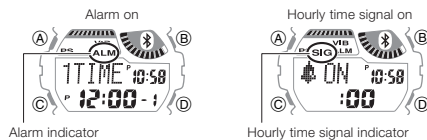

E-32

- To change an alarm time setting, hold down **(A)** for about two seconds until the hour digits of the current alarm time start to flash.



[SET Hold] will appear on the display. After that, [SET Hold] will disappear and the hour digits will flash.

- Each press of **(C)** causes the flashing to move between the hour and the minutes digits.

The flashing digits are the ones that are selected.

- Use **(B)** and **(D)** to change the flashing setting, and set the hour and minutes you want.

- Holding down either button scrolls the setting at high speed.
- If you are using 12-hour timekeeping, the PM indicator will appear for times between noon and 11:59 p.m.

E-33

- After all the settings are the way you want, press **(A)** to exit the setting screen.

- To return to the Timekeeping Mode, press **(C)** four times.

## To stop a tone/vibration alert operation

- Double-tapping the center of the watch display or pressing any one of the buttons will stop an ongoing tone/vibration alert operation.

## To test the alarm


- In the Alarm Mode, hold down **(D)** to perform the tone/vibration alert operations.

E-34

## Stopwatch

The stopwatch measures elapsed time in units of 1/100 seconds up to 23 hours, 59 minutes, 59.99 seconds. Elapsed time returns to zero automatically and timing continues from there when the maximum limit is reached.

## To enter the Stopwatch Mode

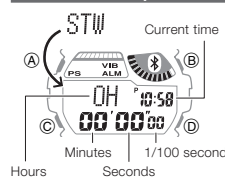

- In the Timekeeping Mode, press **(C)** three times to enter the Stopwatch Mode.

See "Using Modes" (page E-14).

[STW] will appear on the display for about one second, and then the stopwatch screen will appear.

E-35


## To measure time with the stopwatch

- The following shows button operations for stopwatch operations.

- Elapsed time/cumulative time



- Split time (paused elapsed time reading)



Pressing **(B)** while timing is being performed displays the split time (with [SPLIT] flashing), but elapsed timing continues internally.

E-36

### Note

- Once started, elapsed time measurement continues until you press **(D)** to stop it, even if you change to a different mode and even if the stopwatch reaches the elapsed time measurement limit.
- If you change to another mode while a split time is frozen on the display, split time display will be canceled.

E-37

## Timer

The timer start time can be set in one-minute increments up to 24 hours. The watch will sound a tone or vibrate for about 10 seconds when the end of the timer countdown is reached.

See "f. Alert method for alarm/timer" (page E-50).

## To enter the Timer Mode



E-38

- In the Timekeeping Mode, press **(C)** four times to enter the Timer Mode.

See "Using Modes" (page E-14).

## To set the timer start time

- In the Timer Mode, hold down **(A)** for about two seconds.



[SET Hold] will appear on the display. After that, [SET Hold] will disappear and the hours digits will flash.

### Note

- If a timer countdown operation is in progress, press **(D)** to stop it and then press **(B)** to reset the timer to its start time before performing the above step.
- If a timer countdown operation is paused, press **(B)** to reset the timer to its start time before performing the above step.

- Each press of **(C)** causes the flashing to move between the hours and the minutes digits.

The flashing digits are the ones that are selected.

E-39

## 3 Use **B** and **D** to change the hours and minutes settings.

- Holding down either button scrolls the setting at high speed.
- To specify a start time of 24 hours, set the timer to 0:00.

## 4 After all the settings are the way you want, press **A** to exit the setting screen.

### To perform a countdown

#### The following shows button operations for a countdown.



#### Note

- A tone/vibration alert is performed for about 10 seconds when the end of the countdown is reached, and the display returns to the screen that was shown before the countdown was started.

E-40

E-41

## Setup

You can use the Setup Mode to check Mobile Link information and to configure various option settings.  
For information about Mobile Link information, visit the "User's Guide for Mobile Link Functions" page of the CASIO website.

### Configuring Option Settings

The items that can be configured as option settings are described below.

|                                | Item                             | Description                                                                   |
|--------------------------------|----------------------------------|-------------------------------------------------------------------------------|
| Notification from mobile phone | Alert duration setting           | Specifies the alert duration for incoming phone calls, incoming mail, etc.    |
|                                | Animation display on/off setting | Turns animation display on or off for incoming phone calls.                   |
|                                | Alert method setting             | Specifies tone and/or vibration for incoming phone calls, incoming mail, etc. |
| Alarm/timer                    | Alert method setting             | Specifies tone or vibration for alarms and timer time up alerts.              |

E-42

E-43

## 1 In the Timekeeping Mode, press **C** five times to enter the Setup Mode.

See "Using Modes" (page E-14).

[SETUP] will appear on the display for about one second, and then the Mobile Link information screen will appear.


#### Note

If you do not perform any operation for about two or three minutes while in the Setup Mode, the watch will automatically return to the Timekeeping Mode.

## 2 In the Setup Mode, hold down **A** for about two seconds.

[SET Hold] will appear on the display. After that, [SET Hold] will disappear and the screen for setting the alert duration for notifications from mobile phone will appear.

## 3 Each press of **C** cycles through available settings in the sequence shown below.

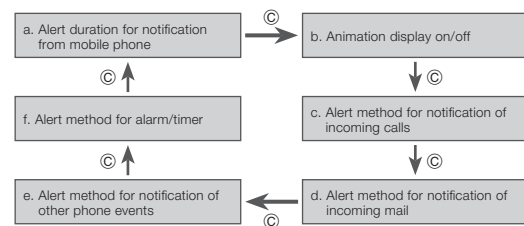

E-44

E-45

## 4 Configure option settings for each of the above items.

See "Configuring Option Settings" below for details.

## 5 After all the settings are the way you want, press **A** to exit the setting screen.

You can press **A** to exit the setting screen from any one of the option setting screens.

## 6 To return to the Timekeeping Mode, press **C**.

### Configuring Option Settings

#### a. Alert duration for notification from mobile phone


- Press **D** to select an alert duration setting (2 seconds, 3 seconds, 4 seconds).

- You can also use this setting screen to change the vibration type, if you want.

Press **B** to select a vibration type (A, b, C).

#### Note


The vibration type for the alarm and timer is fixed and cannot be change.

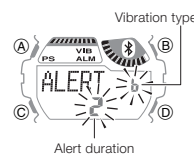

E-46

E-47

#### b. Animation display on/off



- Press **D** to toggle animation display between on and off.

#### Note

Animation is not displayed in the case of alerts other than those for incoming phone calls.

#### c. Alert method for notification of incoming calls

#### d. Alert method for notification of incoming mail

#### e. Alert method for notification of other phone events



Incoming call alert method icon

- Use **D** to select the alert method.

: Alert by vibration

: Alert by tone

: Alert by vibration and tone


No icon : No alert by either tone or vibration  
Alert is by display indication only.

E-48

E-49

## f. Alert method for alarm/timer

- Use **D** to select the alarm/timer alert method.

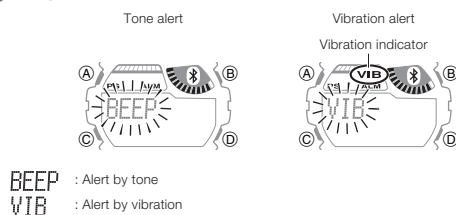


E-50

## Button Operation Tone

You can use the procedure below to turn the tone that sounds when you press a button on or off.

### To turn the button operation tone on or off



E-51



- 2 Press **C** nine times to display the button operation tone setting screen.  
See "Configuring Current Time and Date Settings Manually" (page E-19).  
The screen will show either [KEY.] or [MUTE].



- 3 Press **D** to toggle the setting between [KEY.] (ON) and [MUTE] (OFF).  
When [MUTE] (OFF) is selected, a MUTE indicator is displayed to indicate that the button operation tone will not sound.

E-52

- 4 To return to the Timekeeping Mode, press **A**.

### Note

The above procedure affects the button operation tone only. The alarm, hourly time signal, and time up alarm are not affected.

E-53

## Illumination

You can use the procedure below to illuminate the display for easy reading in the dark.

### To illuminate the display

- Press **D** to illuminate the display.

### Note


Illumination will turn off automatically if it is on when an alarm alert, incoming call alert, or any alert operation starts.

### ◆ Light Use Precautions

Frequent use of the light can shorten battery life.

E-54

### To specify the illumination duration



- 1 In the Timekeeping Mode, hold down **A** for about two seconds until the time zone setting screen appears.



- 2 Press **C** 10 times to display the illumination duration setting screen.  
See "Configuring Current Time and Date Settings Manually" (page E-19).  
The screen will show either [LT1] or [LT3].

E-55

- 3 Press **D** to toggle the illumination duration setting between [LT1] (1.5 seconds) and [LT3] (3 seconds).

- 4 To return to the Timekeeping Mode, press **A**.

## Low Battery Indication

A low battery indicator appears on the display when battery voltage drops below a certain level. Availability of some functions becomes limited while the low battery indicator is displayed. If the low battery indicator remains on the display, have the battery replaced as soon as possible.

### Note


For information about battery life guidelines and supported battery types, see the product specifications.

See "Specifications" (page E-60).

E-56

The following describes how display of the low battery indicator affects watch operation.

### Low Battery indicator



- The watch enters the Timekeeping Mode.
- Bluetooth connection turns off and Mobile Link is disabled.
- Display illumination becomes disabled.
- Alert sound and vibration become disabled.
- Double-tap operation becomes disabled.

### Note

Repeated use of Mobile Link Functions, display illumination, tone/vibration alert, or other functions over a short period can result in a momentary drop in battery voltage. This can cause temporary display of the low battery indicator and limited availability of some watch functions.

E-58

## Demo Mode

The Demo Mode can be used to cycle the watch automatically through its various display modes.

- To enter the Demo Mode, hold down **C** for about three seconds.
- To exit the Demo Mode, press any button.

E-59

# Operation Guide 3407

CASIO®

## Specifications

Accuracy : ±15 seconds a month  
at normal temperature

Basic Functions : Hour, minutes, seconds; a.m./p.m. (P); 12/24-hour timekeeping format; Month, day, day of the week; Full auto calendar (2000 to 2099); Summer time setting

World Time : Current time in 100 cities (35 time zones) + UTC (Universal Coordinated Time) time display; Summer time setting

Alarms and Hourly Time Signal : Alarms  
Daily or one-time alarms: 5  
Setting units: Hour, minute  
Tone or vibration alert: 10 seconds  
Hourly time signal  
Beeps or vibrates every hour on the hour

E-60

Stopwatch : Measuring unit: 1/100 second  
Measuring capacity: 23:59'59.99" (24 hours)  
Measurement functions: Elapsed time, cumulative time, split times

Countdown Timer : Countdown unit: 1 second  
Countdown range: 24 hours  
Setting unit: 1 minute  
Time up alert: 10-second tone or vibration

E-61

Mobile Link Functions : Time Correction  
Auto correction/manual correction  
Alert  
Tone and/or vibration alert for incoming calls, incoming mail, etc.  
Phone finder  
Watch operation sounds the alert sound of the mobile phone.  
Data Communication Specifications  
Bluetooth® v4.0 (Bluetooth® low energy technology compatible)  
Data rate: 1 Mbps  
Transmission output: 0 dBm (1 mW)  
Communication range: 2 meters max. (depends on environment)  
Encryption: 128 bit AES

Other : Low battery alert; Auto return to Timekeeping Mode; Power Saving;  
Vibration alert; Tap function; High-brightness LED light; Selectable illumination duration; Operation tone on/off

Battery : One lithium battery (Type: CR2032)

E-62

Approximate Battery Life : 2 years  
Usage Conditions  
• Mobile Link operation: 12 hours/day  
• Incoming call alert: 3 times (tone and vibration for 2 seconds)/day  
• Incoming mail, other alerts: 10 times (tone only for 2 seconds)/day  
• Illumination: Once (1.5 seconds)/day  
• Alarm: Once (tone only for 10 seconds)/day  
Approximate battery life can be shortened by more frequent operation.

E-63

## City Name List

L-1

## City Name List

| City Name  | Time Zone | City Name  | Time Zone | City Name   | Time Zone |
|------------|-----------|------------|-----------|-------------|-----------|
| (UTC)      |           | Frankfurt  |           | Helsinki    |           |
| Reykjavik  |           | Oslo       |           | Istanbul    |           |
| Lisbon     | 0         | Rome       |           | Kyiv        | +2        |
| Casablanca |           | Copenhagen |           | Cairo       |           |
| London     |           | Berlin     | +1        | Jerusalem   |           |
| Madrid     |           | Stockholm  |           | Moscow*     |           |
| Paris      |           | Budapest   |           | Addis Ababa | +3        |
| Algiers    | +1        | Warsaw     |           | Jeddah      |           |
| Brussels   |           | Cape Town  |           | Tehran      | +3.5      |
| Amsterdam  |           | Sofia      | +2        | Dubai       | +4        |
| Zurich     |           | Athens     |           | Kabul       | +4.5      |

L-2

| City Name    | Time Zone | City Name    | Time Zone | City Name       | Time Zone |
|--------------|-----------|--------------|-----------|-----------------|-----------|
| Karachi      | +5        | Beijing      |           | Chatham Islands | +12.75    |
| Delhi        | +5.5      | Manila       |           | Nukualofa       | +13       |
| Kathmandu    | +5.75     | Shanghai     | +8        | Kiritimati      | +14       |
| Novosibirsk* |           | Taipei       |           | Pago Pago       | -11       |
| Dhaka        | +6        | Seoul        | +9        | Honolulu        | -10       |
| Yangon       | +6.5      | Tokyo        |           | Anchorage       | -9        |
| Bangkok      |           | Adelaide     | +9.5      | Vancouver       |           |
| Hanoi        | +7        | Vladivostok* |           | San Francisco   |           |
| Jakarta      |           | Guam         | +10       | Seattle         | -8        |
| Kuala Lumpur |           | Sydney       |           | Los Angeles     |           |
| Singapore    | +8        | Noumea       | +11       | Tijuana         |           |
| Hong Kong    |           | Wellington   | +12       | Edmonton        | -7        |
| Perth        |           | Suva         |           | Phoenix         |           |

L-3

| City Name      | Time Zone | City Name    | Time Zone | City Name           | Time Zone |
|----------------|-----------|--------------|-----------|---------------------|-----------|
| Chihuahua      | -7        | Kingston     |           | Rio de Janeiro      | -3        |
| Denver         |           | Philadelphia |           | Fernando de Noronha | -2        |
| Mexico City    |           | Bogota       | -5        | Praia               | -1        |
| Winnipeg       |           | New York     |           |                     |           |
| Dallas         | -6        | Boston       |           |                     |           |
| Houston        |           | Caracas      | -4.5      |                     |           |
| Guatemala City |           | Santiago     |           |                     |           |
| Chicago        |           | La Paz       |           |                     |           |
| Atlanta        |           | San Juan     | -4        |                     |           |
| Havana         |           | Halifax      |           |                     |           |
| Toronto        | -5        | St. John's   | -3.5      |                     |           |
| Lima           |           | Buenos Aires |           |                     |           |
| Washington DC  |           | Montevideo   | -3        |                     |           |

L-4

### Note

- The above list shows the city names of this watch.
- If you will use the watch in a city that is not included in the City Name List, select a city name that is in the same time zone as your city.
- Time zones in the above list are in accordance with Coordinated Universal Time (UTC).

\* In June 2012, the time offsets of the cities listed below were changed by +1 hour. Note that this watch does not reflect this change and it uses the former offsets of these cities.

When using this watch in the cities below, always leave the summer time setting ON in order to advance the time by one hour.

Moscow  
Novosibirsk  
Vladivostok

L-5