

## INSTRUCTION MANUAL FOR STOP WATCH

### Your Chronograph features:

1. Time / calendar display
2. 24 - hour stopwatch
3. alarm
4. hourly chime
5. 12 / 24 - hour mode option

### TIME / CALENDAR DISPLAY MODE

1. Time display in hour, minutes, seconds and day of week  
- normal time display state
2. Calendar display in month, date, day of week
3. Alarm time display and disarm  
- holding down S1
4. Alarm on (Ⓜ on) / off (Ⓜ off)  
- holding down S1 and S3
5. Chime on (all day - flags on) / off (all day - flags off)  
- holding down S1 and S2

### To set time and calendar - depress S2 three times

- select flashing digit(s) to be set by depressing S1 and then advance figure by depressing S3 (fast advance by holding down S3 for more than 2 seconds)
  - select 12 / 24 - hour cycle option when setting normal time hour by advancing figure to "A" / "P" for 12 - hour mode or "H" for 24 - hour mode
  - depress S2 once again will return to time display state
- To set alarm time - depress S2 twice
- set alarm hour and minutes in the same way as above
  - depress S2 once again will return to time display state



### STOPWATCH MODE

This mode counts in 1 / 100th of a second interval for the first 30 minutes of timing (29min 59sec), and then in 1 second increment up to a maximum of 24 hours (23hr:59min59sec).

### To enter stopwatch mode - depress S2 in time display state

1. Start / Stop - depress S3 once
2. Split (lap) time - depress S1 to 'freeze' elapsed time display while counting, and depress S1 again to resume timing
3. Reset - depress S1 when the stopwatch stops counting

To return to time display state - depress S2 once again  
Battery replacement LR44 or equivalent

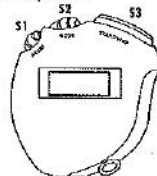

### BATTERY REPLACEMENT:

1. Turn and remove the cover
2. Change the new battery
3. Replace and turn the cover

Remarks: Please be careful not to lose the "O" ring (small rubber ring) when opening the battery hatch and make sure that the "O" ring is re-stored properly after battery replacement.

## **MANUEL D'INSTRUCTIONS POUR CHRONOMÈTRE**

### **Caractéristiques de votre chronographe**

1. Affichage heure/date
2. Chronomètre 24-heures
3. Alarme
4. Carillon toutes les heures
5. Option de modes 12 / 24-heures

### **MODE D'AFFICHAGE HEURE/CALENDRIER**

1. Affichage de l'heure en heure, minutes, secondes et jour de la semaine  
- état d'affichage d'heure normal.
2. Affichage de calendrier par mois, date et jour de la semaine.
3. Affichage et désarmement de l'heure d'alarme  
- appuyer sur S1
4. Pour mettre alarme en marche/en arrêt (on/off)  
- appuyer sur S1 et S3
5. Pour mettre le carillon en marche/en arrêt (flags on/flags off)  
- appuyer sur S1 et S2

### **Pour régler l'heure et le calendrier - appuyer sur S2 trois (3) fois**

- Sélectionner le chiffre cliquant à être réglé en appuyant sur S1 et le chiffre s'avancera en appuyant sur S3 (pour avancer rapidement appuyer sur S3 pour plus de 2 secondes).
- Sélectionner l'option cycle de 12/24 heures lors du réglage de l'heure normal en avançant le chiffre à "A"/"P" pour mode 12-heures ou "H" pour mode 24-heures
- Appuyer sur S2 encore un fois pour retourner à l'état d'affichage de l'heure.

### **Pour régler l'heure de l'alarme - appuyer sur S2 deux (2) fois**

- Régler l'heure de l'alarme de la même façon que mentionné ci-haut.
- Appuyer sur S2 de nouveau et vous retournerez à l'état d'heure normale.

### **MODE CHRONOMÈTRE**

Cette mode calcule en 1/100e de seconde pour les premières 30 minutes de réglage (29 min 5999 sec) et ensuite en incréments de 1 seconde jusqu'à un maximum de 24 heures (23 h/59 min/59sec).

Pour activer le chronomètre, appuyer sur S2 dans l'état d'affichage de l'heure

1. Commencer/Arrêter - appuyer sur S3 une (1) fois
2. Temps (hour) Intermédiaire - appuyer sur S1 pour 'immobiliser' le temps écoulé et appuyer sur S1 de nouveau pour résumer le minuteur.
3. Recommencer - appuyer sur S1 lorsque le chronomètre recommencer à compter.

Pour retourner à l'état d'affichage de l'heure - appuyer sur S2 de nouveau.

Remplacement de la pile LR44 ou équivalent.

### **REPLACEMENT DE LA PILE**

1. Tourner et enlever le couver
2. Changer la pile
3. Remplacer le couver et fermer.

N.B. Assurez-vous de ne pas perdre le cerceau "D" (en caoutchouc) lorsque vous ouvrez le dos du chronomètre et remplacez-le lorsque que vous avez complété le changement de pile.