
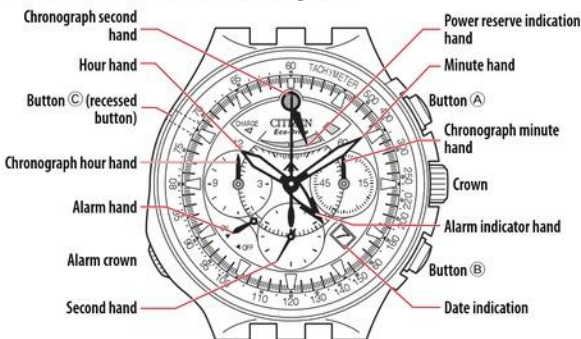



- This watch is solar-powered. Expose the dial to light and use it sufficiently charged.
- To see details of charging time, specifications and operations, refer to the instruction manual:  E210 instruction manual

## Component identification


### • Models with the crown at the 3 o'clock position



### • Models with the crown at the 12 o'clock position

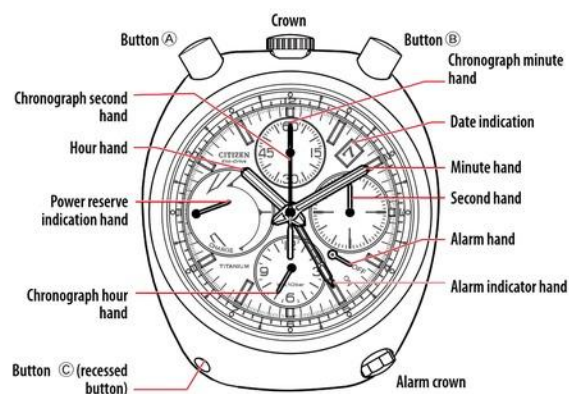



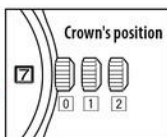





- Actual appearance may differ from the illustrations.
- The crown has two positions when pulling it out.
- Refer also to our web page for detail of usage of the scale and bezel on the watch.  
(<http://www.citizenwatch-global.com/support/pdf/enhanced/e.pdf>)



## Checking the power reserve

You can see current power reserve level by referring to the power reserve indication hand. Use the watch with sufficiently charged.

Level	3	2	1	CHARGE
Indication (Models with the crown at the 3 o'clock position)				
Indication (Models with the crown at the 12 o'clock position)				
Duration (approx.)	8 - 7 months	7 - 5 months	5 months - 7 days	7 days or shorter
Meaning	Power reserve is sufficient.	Power reserve is OK.	Power reserve is getting low.	Insufficient charge warning has started.
	OK for normal use.			Charge immediately.

## Setting the time

### 1. Pull the crown out to position 2 when the second hand points 0 second.

The second hand stops.

### 2. Rotate the crown to set the time.

- Change of date indication shows it just became AM. Take care the time set is AM or PM.
- Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.

### 3. Push the crown in to position 0 in accordance with a reliable time source to finish the procedure.

The second hand starts moving.

## Setting the date indication

- Do not adjust the date indication while the watch shows 9:00 PM - 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.
- Date indication adjustment is required on the first days of March, May, July, October and December.

### 1. Pull the crown out to position 1.

### 2. Rotate the crown counterclockwise to set the date indication.

### 3. Push the crown in to position 0 to finish the procedure.

## Using the chronograph

- Measuring up to 12 hours in 1/5 second increments.

### 1. Push the crown in to position **0**.

### 2. Start measurement.

Start/stop: press button **A**.

Reset: press button **B** while the chronograph is stopped.

- Be sure to reset chronograph after finishing measurement.

### 12 hours or more after starting measurement

As 12 hours have passed since measurement started, the chronograph hands stop but measurement has not stopped. Reset the chronograph.

## Using the alarm

- The alarm time is set in 12-hour basis.

### 1. Pull out the alarm crown.

### 2. Rotate the alarm crown to set the alarm time.

- Move the alarm indicator hand 30 minutes or so forward and move it back to the time you want to set.
- The alarm may sound earlier or later (about  $\pm 5$  minutes) than the time set. Use the time set by the hand only as approximate reference.

### 3. Push in the alarm crown.

The alarm time setting is finished.

- Press the alarm crown to set the alarm hand to "ON" if it points "OFF".

### To stop alarm

Press the alarm crown.

- The alarm sounds for 20 seconds.

### To set the alarm ON/OFF

Each time you press the alarm crown, ON/OFF of the alarm changes alternately.

- The alarm sounds if it is set to "ON" again within 20 minutes after stopping it.

## Resetting the watch — All Reset

Confirm the following before All Reset.

- The power reserve indication hand points level 3 or 2.
- The chronograph has been reset.

### 1. Pull the crown out to position **2** when the second hand points **0** second.

### 2. Press and release both button **B** and recessed button **C** at the same time.

Alarm sounds and the power reserve indication hand move to level 3. The reference position of each hand is adjusted automatically.

### 3. Push the crown in to position **0** to finish the procedure.

The power reserve indication hand moves back and forward and the second hand starts moving.

### After All Reset

After All Reset, set the time and date indication. Set also the alarm.

