


Module No. 676



READING THE DISPLAY

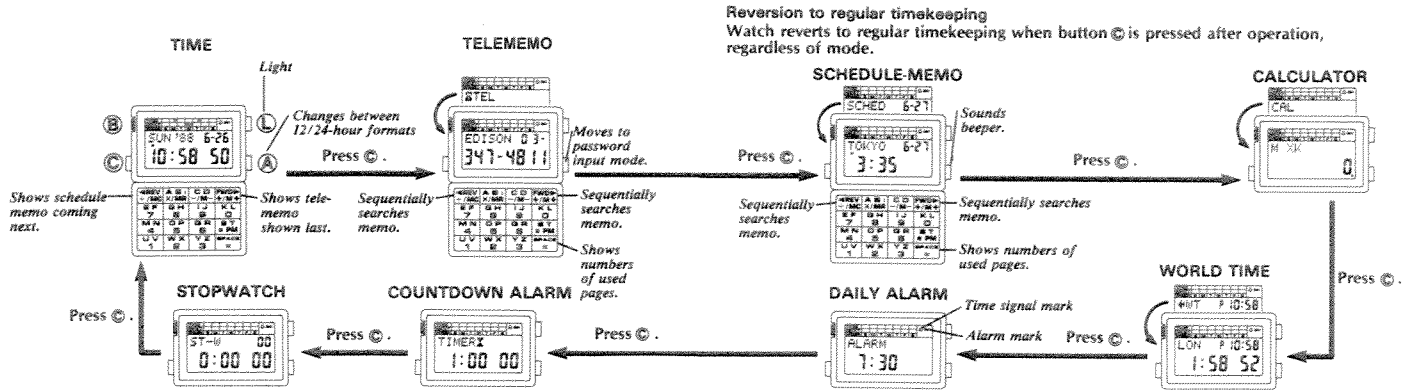

TELEMEMO OPERATION

50 sets (pages) of 9 letters and 12 numerals can be memorized. This data base can be utilized as a telephone directory, or memo. Press [REV] or [PMD] to search the memory contents. Keep pressed to search quickly. Used pages are automatically stored in alphabetical order. Password function keeps memories private.

SEARCHING TELEMEMO

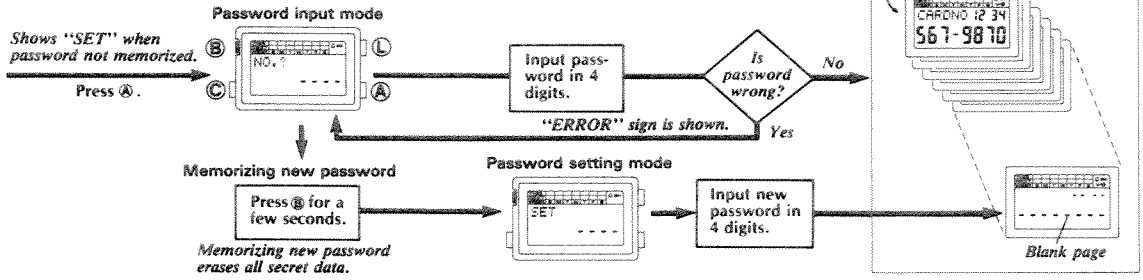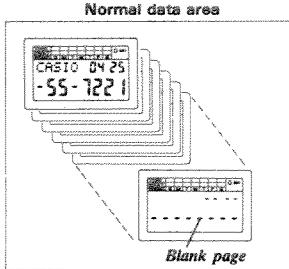

Filling TELEMEMO

Name part (can be input up to 9 characters.)

- 1) Press [REV] or [PMD] in the normal data or secret data area to search a blank page or number to be revised.
- 2) Press [F1] to enter new data.
- 3) Press name/numeral for input. Press [A] to shift the cursor and [C] to reverse. Hold down for rapid movement.

When inputting characters in name part, press appropriate key, press sequentially, if necessary.

(EX: Inputting "N".)

OPERATION	DISPLAY
Press [M] [N]	"M"
Press twice.	"N"

- 4) Press [F1] to complete memorizing and this page is automatically stored in alphabetical order.

Scrolling the display


When the record is entered with over 7 digits, the display will scroll from right to left to show all the contents.

SCHEDULE-MEMO OPERATION

50 sets of 12-character message and date/time can be memorized. Beeper sounds for 20 seconds at scheduled time. Memories are shared between TELEMEMO and SCHEDULE-MEMO. Past memo is automatically erased.

Searching SCHEDULE-MEMO

When the display is converted to this schedule-memo, next schedule-memo will be shown. Press [PMD] to search the memory contents sequentially, and [REV] to reverse. Schedule-memo can be confirmed from this week to next week using chart. When regular timekeeping passes time written in the schedule-memo, the schedule-memo is automatically erased.

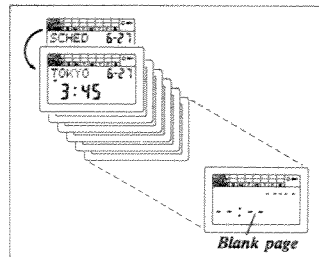


Scrolling the display

When the record is entered with over 7 digits, the display will scroll from right to left to show all the contents.

Inputting SCHEDULE-MEMO

- 1) Press [REV] or [PMD] in SCHEDULE-MEMO to search blank page or page to be revised.
 - 2) Press [F1] to enter new data.
 - 3) Press name/numeral for input. Press [A] to shift the cursor and [C] to reverse. Keep pressed for rapid movement.
-
- 4) Press [F1] to complete.

SETTING TIME AND CALENDAR

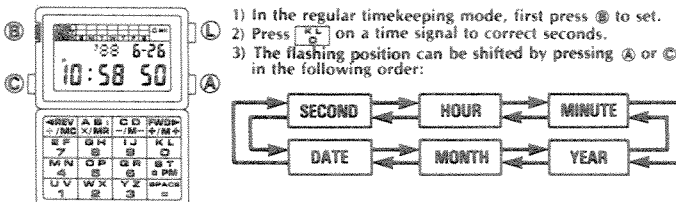

- 4) Press numeral for input.
- 5) Press [F1] to complete setting.

* Year digits can be set up to the year 2004 by inputting last two digits.
** Schedule-memo can be confirmed from this week to next week using chart.

CALCULATOR OPERATION

Silences the tone to save battery. (Symbol: Ⓚ)

Appears when data enters in memory. (Symbol: M)

Function command sign. (Symbol: Ⓚ)

Appears when a number is set as a constant. (Symbol: C)

Appears when Ⓚ is pressed. (Symbol: Ⓚ)

Clears entry for correction. Releases overflow or error check. (Symbol: Ⓚ)

8-digit entry (7-digit for negatives) can be made. (Symbol: Ⓚ)

Command keys (\div / \times / $-$ / $+$) function as memory command keys (MC/MR/M-/M+) if pressed after Ⓚ .

**No input is possible with a fingernail or pen.*

Be sure to press the Ⓚ button when starting calculations.

EXAMPLE	OPERATION	DISPLAY	EXAMPLE	OPERATION	DISPLAY
Basic calculation: $(12 - 0.5) \times 3 + 7$ $= 4.9285714 \dots$	Ⓚ 12 - . $5 \times 3 + 7 =$	4.9285714	$25^2 = 625$	Ⓚ 25 \times =	625
Constant calculation: $3 + 4 = 7$ (4 is constant)	Ⓚ 4 + + 3 =	7	$25^2 = 15625$	=	15625
	8 + 4 = 12	12	$25^4 = 390625$	=	390625
	3 - 4 = -1	-1	Table with 4 columns: Item, Price, Qty, Amount	50×150	7500
	8 - 4 = 4	4	A 50 150 7,500	60×30	1800
	8 \times 4 = 12	12	B 60 30 1,800	40×100	4000
	8 \times 4 = 32	32	C 40 100 4,000	Ⓚ =	13300
	3 + 4 = 0.75	0.75	Total 13,300		
	8 - 4 = 2	2			

SETTING DAILY ALARM

If the daily alarm is set the buzzer sounds for 20 seconds at the preset time every day until cleared. To stop the buzzer while sounding, press any button. If the time signal is set, the watch sounds every hour on the hour.

Pressing alarm time

- Press Ⓚ to enter new alarm time.
- Press numeral for input.
- Press Ⓚ to complete setting.

* When the watch is in the 24-hour system, the alarm time is displayed in that system.

ON OR OFF SETTING OF DAILY ALARM AND TIME SIGNAL

Press Ⓚ .

Daily alarm and time signal sound.

Daily alarm and time signal do not sound.

Daily alarm only sounds.

Time signal only sounds.

STOPWATCH OPERATION

SPLIT/RESET (Symbol: Ⓚ)

START/STOP (Symbol: Ⓚ)

A signal confirms start/stop operation. (Working range) The stopwatch display is limited to 23 hours 59 minutes 59.99 seconds. Thereafter it can be reset and started again.

(a) Net time measurement

(Start) (Time loss) (Stop) (Re-start) (Stop) (Reset)

(b) Split time measurement

(Start) (Split) (Split release) (Stop) (Reset)

(c) 1st-2nd place times

(Start) (Split) (Stop) (Split release) (Reset)

The first runner finishes. The second runner finishes. Record the time of the second runner.

OPERATING WORLD TIME

The current time of any spot in the world (standard time of 24 cities) can be shown by pressing Ⓚ or Ⓚ in WORLD TIME. Standard time of city displayed last appears first when mode is shifted from TIME to WORLD TIME.

SETTING WORLD TIME

When one of any local standard time is set, all other standard times are automatically set.

- Press Ⓚ or Ⓚ in WORLD TIME to select appropriate local time.
- Press Ⓚ to set time and date.
- Press Ⓚ or Ⓚ to shift flashing digit(s). Digit(s) to be changed will flash.

Press Ⓚ or Ⓚ .

- Press numeral for input.
- Press Ⓚ to complete setting.

Auto-retrieve function

Display automatically returns to TIME if left unused for a few minutes.

CHANGING TO DAYLIGHT SAVING TIME

Hold down Ⓚ for a few seconds while in WORLD TIME to change to daylight saving time (+1 hour). The daylight saving time mark "Ⓚ" is shown on the display while this setting is in effect. Repeat this procedure to switch back from daylight saving time to standard time.

OPERATING COUNTDOWN ALARM

Auto-repeat mark

Mode indicator

Hour

Minute

Second

Countdown can be set from 1 minute to 24 hours (display shows 0:00:00), and times to an accuracy of 1 second. Start/stop operation is possible by pressing Ⓚ , and is confirmed by a signal. When display reaches zero, beeper sounds for 10 seconds until any button is pressed.

SETTING COUNTDOWN TIME

- Press Ⓚ to set new time.
- Each press of Ⓚ selects auto-repeat or repeat function. The mark (Ⓚ) indicates on setting of auto-repeat function.
- Press Ⓚ or Ⓚ to shift flashing digit(s). Digit(s) to be changed will flash.

Press Ⓚ or Ⓚ .

- Press numeral for input.
- Press Ⓚ to complete setting.

Auto-retrieve function

Display automatically returns to initial countdown timer if left unused for a few minutes.

Auto-repeat function

Pre-entered time is retrieved and started again when display reaches zero.

Repeat function

Pre-entered time is retrieved when display reaches zero.