

TECHNICAL INFORMATION
INFORMACION TECNICA

CITIZEN QUARTZ
Cal. No. A31※



Contents

§1. OUTLINE	1
§2. SPECIFICATIONS	1
§3. HANDLING OF WATCH	2
A. Solar Power Watch.....	2
B. Setting the Time and Calendar.....	2
C. Functions of the Sollar Power Watch	3
D. Time Required for Recharge	4
E. In These Cases	5
F. Care for handling of Charge	5
G. Replacing the Secondary Battery.....	6
§4. PRECAUTIONS FOR DISASSEMBLY AND ASSEMBLY	6
A. How to Remove and Install Conductor Spring.....	6
B. How to Pull Out Setting Stem from One-piece Case.....	6
§5. HOW TO REMOVE AND INSTALL SOLAR CELL	8
§6. DISASSEMBLY AND ASSEMBLY OF MOVEMENT	9
§7. TROUBLESHOOTING AND ADJUSTMENT	11

Índice

§1. DESCRIPCIÓN GENERAL	15
§2. ESPECIFICACIONES	15
§3. MANEJO DEL RELOJ	16
A. Reloj de energía solar	16
B. Ajuste de la hora y del calendario	16
C. Función del reloj de energía solar	17
D. Tiempo requerido para la recarga	18
E. En estos casos	19
F. Cuidados para el manejo de la carga.....	19
G. Cambio de la pila secundaria	20
§4. PRECAUCIONES PARA EL DESMONTAJE Y MONTAJE	20
A. Forma de extraer e instalar el resorte conductor.....	20
B. Forma de extraer el vástago de ajuste de una caja monopieza.....	21
§5. FORMA DE EXTRAER E INSTALAR LA CÉLULA SOLAR	22
§6. DESMONTAJE Y MONTAJE DEL MECANISMO	23
§7. MÉTODO DE INSPECCIÓN Y DE AJUSTE DEL MECANISMO	25

§1. OUTLINE

This watch is an analog solar power watch which has a solar cell on its dial to convert optical energy into electric energy to drive itself.

§2. SPECIFICATIONS

Caliber NO.		A310	A315
Type		Analog solar power watch (Three hands)	
Movement size		25.2 × 27.2 × 3.28t mm	
Accuracy (At normal temperature)		Within ±20 sec/month (within a normal temperature range 5°C~35°C/41°F~95°F)	
IC		1 unit of C/MOS-LSI	
Operating temperature		-10°C~+60°C (14°F~140°F)	
Converter		Bipolar step motor	
Time adjustment		No adjustment terminal for use in market	
Measurement gate		10 sec.	
Additional functions		Quick start	
		Insufficient charge warning	
		Time setting warning	
		Overcharge prevention	
Secondary battery	Part NO.	295-41	
	Remarks	Secondary battery block (With welded lead plate)	
Appearance structure		Case back fitting structure	One-piece structure

§3. HANDLING OF WATCH

A. Solar Power Watch

This watch is powered not by an ordinary battery, but by converting light energy into electrical energy.


A secondary battery is used in this watch to store electrical energy. **This secondary battery is a clean energy battery which doesn't use any toxic substances such as mercury. Once fully charged, the watch will continue to run for about 40 days without further charging.**

To use this watch comfortably, **make sure that the watch is always recharged before it finally stops.**

There is no concern for over-charging this watch. (Overcharge Prevention Function is included)

Explain the user to expose the dial (solar cell) of this watch to light as long as possible.

B. Setting the Time and Calendar

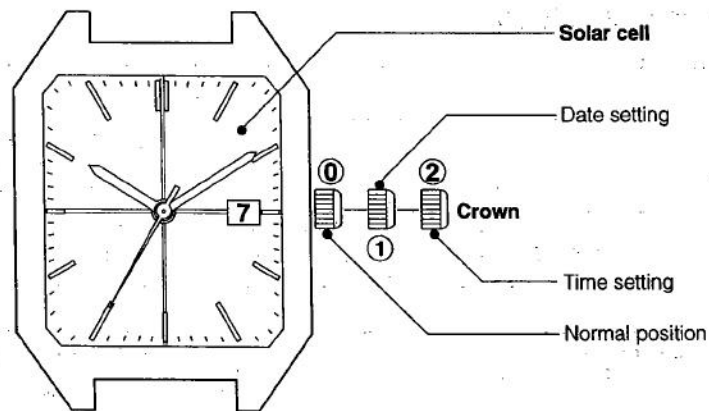

■ Setting the time


1. Stop the second hand at the 0 second position by pulling the crown out to the 2nd click.
2. Turn the crown to set the time.
3. After setting the time, firmly push the crown back in to its normal position.

■ Setting the calendar


1. Pull the crown out to the 1st click.
2. Set the desired date by turning the crown.
 - Do not adjust the date when the watch display is reading between 9:00 pm and 1:00 am. otherwise the date might not change on the following day.
3. After you have set the calendar, be sure to firmly return the crown to its normal position.

C. Functions of the Solar Power Watch

If the charge becomes insufficient, a warning function will operate and the display changes, as below.

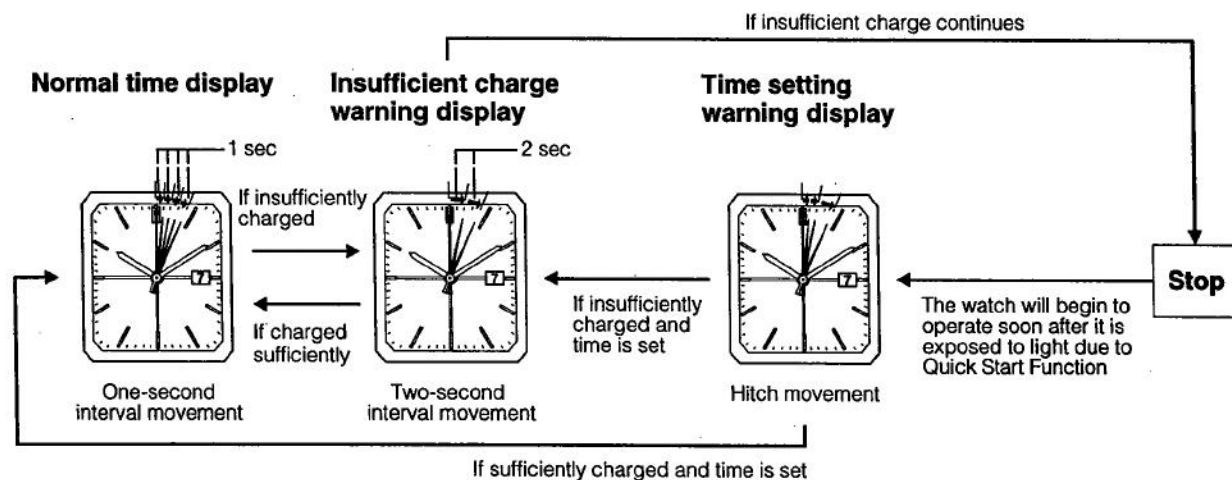

■ Insufficient Charge Warning Function

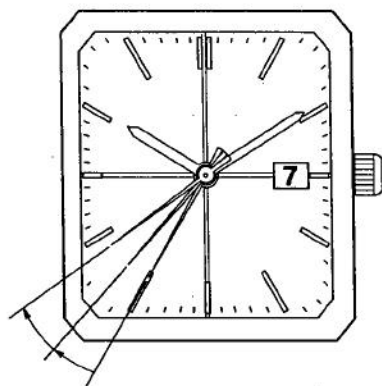

Two second interval movement

The second hand changes to two-second interval movement to indicate insufficient recharging.

Even in such a case, the watch keeps correct time, but about 24 hours after the two-second interval movement begins, the watch will stop.

After exposing the watch to light, recharging takes place and the watch returns to one-second interval movement.


■ Quick Start Function

The watch will stop if it is completely discharged.

It will begin to operate soon after (within 10 second) it is exposed to light.

(However, the time to start may vary according to the brightness of the light.)

■ Time Setting Warning Function

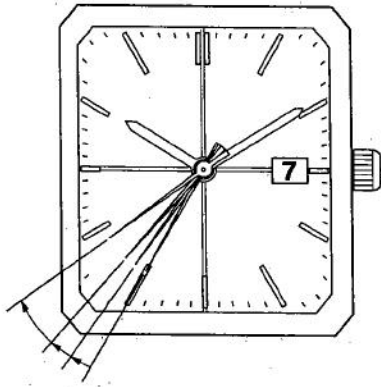

Hitch movement

If the watch stops, subsequent exposure to light allows the 'quick start' function to start again, and **the second hand moves with a hitch to indicate that the time is incorrect.**

In this case, quickly recharge the watch and reset the time.

Even if the secondary battery is fully recharged, the hitch movement will continue, unless the time is reset and the crown is returned to the normal position.

■ Overcharge Prevention Function

Once the secondary battery is fully recharged, the overcharging prevention feature comes into operation and prevents over-charging.

D. Time Required for Recharge

Time required for recharge may vary according to the design (color of the dial, etc.) and operating environment. The following table will serve you as rough reference.


"The recharging time is the time when the watch is continuously exposed to radiation."

Illuminance (lux)	Environment	Time required		
		From the stop state to the one second movement	One day usage	Empty to full
500	Inside an ordinary office	9 hours	1 hour 30 minutes	75 hours
1000	60-70cm under a fluorescent light (30W)	4 hours	40 minutes	36 hours
3000	20cm under a fluorescent light (30W)	1 hour 30 minutes	15 minutes	12 hours
10000	Exterior, cloudy	30 minutes	6 minutes	6 hours
100000	Exterior, summer, sunny	8 minutes	3 minutes	3 hours

Full recharging timeThe time for fully recharge from stopped.
(Empty to full)

One day usageThe time required for the watch to run for one day with one second interval movement.

E. In These Cases

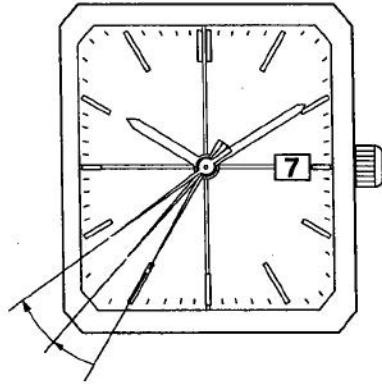


Two-second interval movement

[If the watch warns that the energy is running short]

The second hand starts moving at two-second increments in order to warn that the watch will stop functioning approximately after 24 hours. **(Insufficient charge warning function)**

In such a case, expose your watch to light for a while to cancel the warning. (The second hand returns to the movement at one-second increments when the energy is recharged.)

If the watch is left short of energy, it will stop functioning after 24 hours or so.

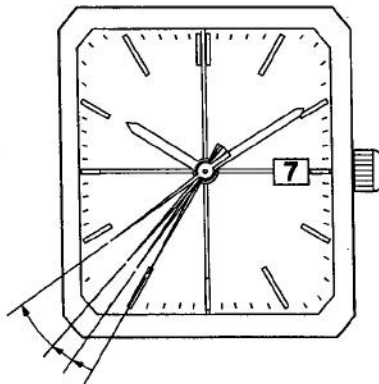

Hitch movement

[If the watch warns you to set the time.]

When the watch that has stopped is exposed to light, the second hand starts hitch movement. **(Quick start function)**

The time elapsed before the second hand restarts moving depends on the illuminance of the light.

After this also, the second hand keeps hitch movement to show that the watch indicates an incorrect time because it once stopped. **(Time setting warning function)**

In such a case, set the hands to the correct time.

* If the watch is insufficiently exposed to light, the second hand will soon switch to the movement at two-second increments in order to warn that the energy is running short.

F. Care for Handling of Charge

■ Notes on Use <Give the following precaution and explanation to the user.>

Take care to charge during use.

Please note that if the user wears long sleeves, the watch can easily become insufficiently charged because it is hidden and not exposed to light.

- When the user takes off the watch, it should be placed in as bright a place as possible, and it will always continue to run properly.

■ Notes on Recharge

- Avoid recharging at high temperatures (over about 60°C/140°F), otherwise the watch will be damaged during recharging.

(eg) Charging the watch near a light source that easily becomes hot, such as an incandescent lamp or a halogen lamp.

Charging in a place that easily becomes hot, such as a dashboard.

When you charge the watch by an incandescent lamp, take a distance about 50cm from the light source to prevent extremely high temperature.

G. Replacing the Secondary Battery

This watch uses the secondary battery, which does not have to be periodically replaced due to repeated charging and discharging, unlike ordinary batteries.

Caution


Never use a battery other than the secondary battery used in this watch.

The watch structure is so designed that a different kind of battery other than the specified cannot be used to operate it. In case a different kind of battery such as a silver battery is used by some chance, there is a danger that the watch will be overcharged to burst, causing damage to the watch and even to the human body.

§4. PRECAUTIONS FOR DISASSEMBLY AND ASSEMBLY

A. How to Remove and Install Conductor Spring

A conductor spring is fitted to CAL. A315 (one-piece case) to secure the electrical connection between the bezel and case (body).

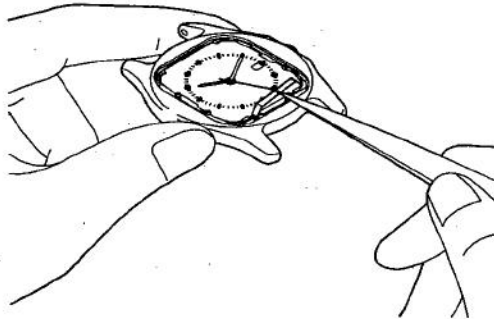

How to remove conductor spring

Hold the top of the conductor spring with tweezers and lift it up.


How to install conductor spring

Install the conductor spring on the 6 o'clock side as shown in the illustration.

B. How to Pull Out Setting Stem from One-piece Case

1. When removing the setting stem from the case

- Pressing down the end of the unlocking lever for setting stem from above, pull out the setting stem.

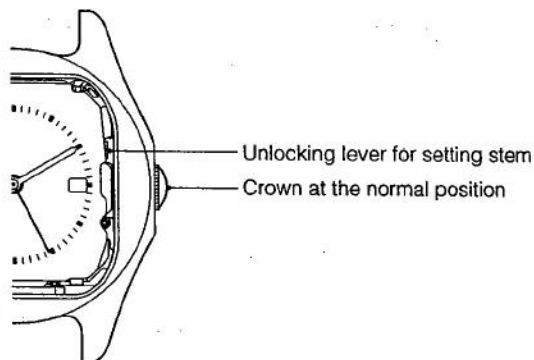

<Procedure>

- (1) Set the crown at the normal position (Push it in).
- (2) Lightly press the end of the unlocking lever for setting stem with a screwdriver, etc. from above.
- (3) With the lever pressed, pull out the setting stem.