
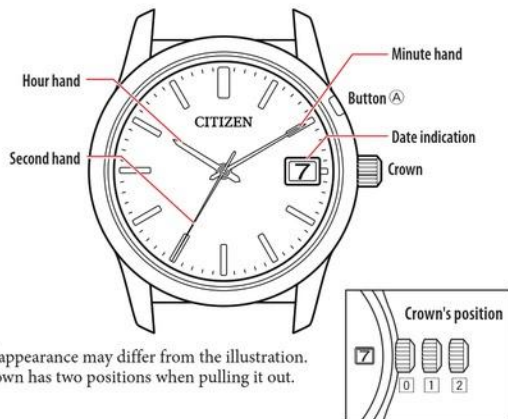


- This watch is solar-powered. Expose the dial to light and use it sufficiently charged.
- To see details of charging time, specifications and operations, refer to the instruction manual:  B11\* instruction manual

## Component identification



- Actual appearance may differ from the illustration.
- The crown has two positions when pulling it out.

## Setting the time and calendar

### Setting the minute and second

- 1. Pull the crown out to position 2.**  
The second hand points 0 second.
- 2. Rotate the crown to adjust the minute.**
  - When you rotate the crown quickly a few times, the hand will move continuously. To stop the rapid movement, rotate the crown in either direction.
  - The hour hand moves synchronously.
  - Change of date indication shows it just became AM. Take care the time set is AM or PM.
- 3. Push the crown in to position 0 in accordance with a reliable time source to finish the procedure.**

### Setting the hour and date

- 1. Push the crown in to position 0.**
- 2. Press and release the upper right button (A).**  
The second hand moves forward-backward-forward.
- 3. Rotate the crown to adjust the hour and date.**
  - When you rotate the crown quickly a few times, the hand will move continuously. To stop the rapid movement, rotate the crown in either direction.
  - The date indication moves synchronously.
  - Change of date indication shows it just became AM. Take care the time set is AM or PM.
- 4. Leave the watch for about 30 seconds without any operation to finish adjustment.**


## Setting the month and year

### 1. Pull the crown out to position 1.


The second hand shows the current setting of the month and year.

- Year and month are indicated as follows:

“Month” corresponds to one of the 12 zones shown in the figure below.  
Each number means month.

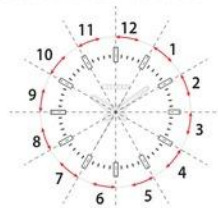

“Year” corresponds to the years since leap year and is indicated with markers in the zone of each month.

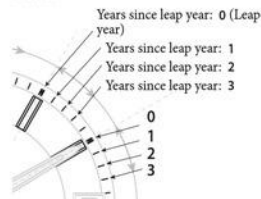

### 2. Rotate the crown to adjust the month and year.

- When you rotate the crown quickly a few times, the hand will move continuously. To stop the rapid movement, rotate the crown in either direction.

### 3. Push the crown in to position 0 to finish the procedure.

## Adjusting the hour easily

You can adjust hour hand easily for overseas trips or other occasions.

- 1. Push the crown in to position 0.**
- 2. Press and release the upper right button (A).**  
The second hand moves forward-backward-forward.
- 3. Rotate the crown to set the hour.**
- 4. Leave the watch for about 30 seconds without any operation to finish adjustment.**



## All Reset and correcting the reference position

### 1. Pull the crown out to position **[2]**.


The second hand moves to the current reference positions stored in memory.

### 2. Press and hold the upper right button **(A)**.

The hour and second hands move forward-backward-forward and All Reset is executed.

### 3. Rotate the crown to adjust the minute and second hands to the 12 o'clock position.

- When you rotate the crown quickly a few times, the hands will move continuously. To stop the rapid movement, rotate the crown in either direction.

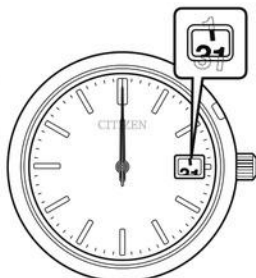

### 4. Push the crown in to position **[1]**.

### 5. Rotate the crown to adjust the date indication to the midway between "31" and "1" and the hour hand to the 12 o'clock position.

- When you rotate the crown quickly a few times, the hand/indication will move continuously. To stop the rapid movement, rotate the crown in either direction.
- The hour hand and the date indication move synchronously.

### 6. Push the crown in to position **[0]** to finish the procedure.

The second hand starts the irregular two-second interval movement (1 step - 1 step - 2 steps).

- Leave the watch without any operation until the second hand starts the movement to store the new reference position.
- Adjust the time and calendar after correcting the reference position. The movement of the second hand returns to normal after the time adjustment.