

TECHNICAL INFORMATION ***INFORMACION TECNICA***

CITIZEN QUARTZ

Cal. No. B800

Cal. No. B810



(Cal. No. B810)



CITIZEN

CITIZEN IS A REGISTERED TRADEMARK OF CITIZEN WATCH CO., JAPAN.

Contents

§1. OUTLINE	1
§2. SPECIFICATIONS	1
§3. HANDLING OF WATCH	2
A. Solar Power Watch	2
B. Setting the Time and Calendar	2
C. Functions of the Solar Power Watch	3
D. Time Required for Recharge	4
E. In These Cases	5
F. Care for handling of Charge	6
G. Replacing the Secondary Battery	6
§4. PRECAUTIONS FOR DISASSEMBLY AND ASSEMBLY	7
A. How to Pull Out Setting Stem from One-piece Case	7
B. Precautions for Removal and Setting of Solar Cell	8
§5. DISASSEMBLY AND ASSEMBLY OF MOVEMENT (Cal. B800)	9
§6. DISASSEMBLY AND ASSEMBLY OF MOVEMENT (Cal. B810)	11
§7. TROUBLESHOOTING AND ADJUSTMENT	13

Índice

§1. DESCRIPCION GENERAL	17
§2. ESPECIFICACIONES	17
§3. MANEJO DEL RELOJ	18
A. Reloj de energía solar	18
B. Ajuste de la hora	18
C. Función del reloj de energía solar	19
D. Tiempo requerido para la recarga	20
E. En estos casos	21
F. Cuidados para el manejo de la carga	22
G. Cambio de la pila secundaria	22
§4. PRECAUCIONES PARA EL DESMONTAJE Y MONTAJE	23
A. Forma de extraer el vástago de ajuste de una caja monopieza	23
B. Precauciones para la extracción y la colocación de la batería solar	24
§5. DESMONTAJE Y MONTAJE DEL MECANISMO (Cal. B800)	25
§6. DESMONTAJE Y MONTAJE DEL MECANISMO (Cal. B810)	27
§7. METODO DE INSPECCION Y DE AJUSTE DEL MECANISMO	29

§1. OUTLINE

This watch is a ladies solar power watch which has a solar cell on its dial that converts the light energy into electrical energy to drive its mechanism.

§2. SPECIFICATIONS

Caliber NO.		B800	B810
Type		Analog solar power watch (Three hands)	
Movement size (mm)		ø28.2 x 3.8t	ø30.4 x 3.57t
Accuracy (At normal temperature)		±15 sec/month (+5°C~+35°C/41°F~104°F)	
IC		1 unit of C/MOS-LSI	
Operating temperature		-10°C~+60°C (14°F~140°F)	
Converter		Bipolar step motor	
Time adjustment		No adjustment terminal for use in market	
Measurement gate		10 sec.	
Additional functions	Date (With quick setting mechanism)	Installed	
	Day (With quick setting mechanism)	Installed	Not installed
	Quick start	Installed	
	Insufficient charge warning	Installed	
	Time setting warning	Installed	
Continuous operating time	From full recharge to stop	Approx. 6 month	
	From two second interval movement to stop	Approx. 3 days	
Secondary battery	Part NO.	295-40	
	Remarks	Secondary battery block (With welded lead plate)	

§3. HANDLING OF WATCH

A. Solar Power Watch

This watch is powered not by an ordinary battery, but by converting light energy into electrical energy.


A secondary battery is used in this watch to store electrical energy. **This secondary battery is a clean energy battery which doesn't use any toxic substances such as mercury. Once fully charged, the watch will continue to run for about 6 months without further charging.**

To use this watch comfortably, **make sure that the watch is always recharged before it finally stops.**

There is no concern for over-charging this watch. (Over-Charging Prevention Function is included)

Explain the user to expose the dial (solar cell) of this watch to light as long as possible.

B. Setting the Time and Calendar

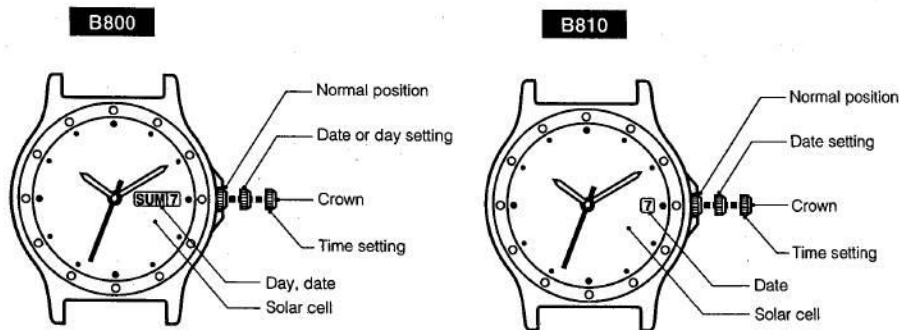

■ Setting the time

- (1) Stop the second hand at the 0 second position by pulling the crown out to the 2nd click.
- (2) Turn the crown to set the time.
- (3) After setting the time, firmly push the crown back in to its normal position.

* The date changes about 0:00 a.m. When setting the time, take care of a.m. and p.m.

■ Setting the calendar

- (1) Pull the crown out to the 1st click.
- (2) Set the desired date by turning the crown to the left (counter clock wise).
- (3) Set the desired day by turning the crown to the right (clock wise).
 - * For watches equipped with date display only, nothing happens when the crown is turned to the right.
- (4) After you have set the calendar, be sure to firmly return the crown to its normal position.


* Do not set the calendar while the hands are indicating the following time zones.

- Watches equipped with date display: 9:00 p.m. – 1:00 a.m.
- Watches equipped with date and day display: 9:00 p.m. – About 4:00 a.m.


If the calendar is set in these time zones, it may not change even on the next day.

C. Functions of the Solar Power Watch

If the charge becomes insufficient, a warning function will operate and the display changes, as below.

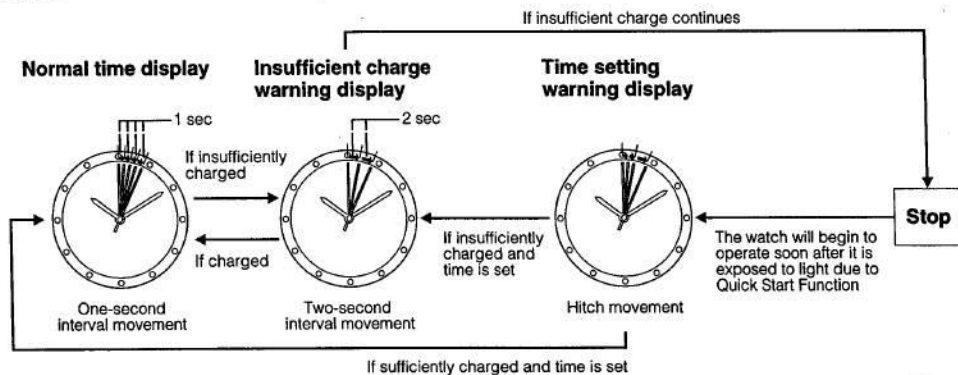

■ Insufficient Charge Warning Function

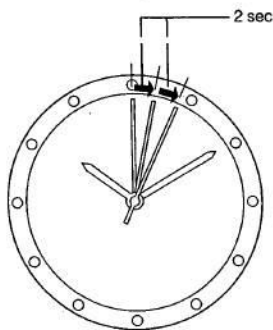

Two-second interval movement

The second hand changes to two-second interval movement to indicate insufficient recharging.

Even in such a case, the watch keeps correct time, but about 3 days after two-second interval movement begins, the watch will stop.

After exposing the watch to light, recharging takes place and the watch returns to one-second interval movement.


■ Quick Start Function

The watch will stop if it is completely discharged.

It will begin to operate soon after (within 10 second) it is exposed to light.

(However, the time to start may vary according to the brightness of the light.)

■ Time Setting Warning Function

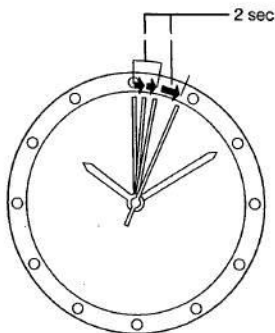

Hitch movement

If the watch stops, subsequent exposure to light allows the 'quick start' function to start again, and **the second hand moves with a hitch to indicate that the time incorrect.**

In this case, quickly recharge the watch and reset the time.

Even if the secondary battery is fully recharged, the hitch movement will continue, unless the time is reset and the crown is returned to the normal position.

■ Over-charging Prevention Function

Once the secondary battery is fully recharged, the overcharging prevention feature comes into operation and prevents over-charging.

D. Time Required for Recharge

Time required for recharge may vary according to the Caliber number, design (color of the dial, etc.) and operating environment. The following table will serve you as rough reference.

"The recharging time is the time when the watch is continuously exposed to radiation."

<Cal. B800>

Illuminance (lux)	Environment	Time required		
		From the stop state to the one second movement	One day usage	Empty to full
500	Inside an ordinary office	22 hours	1 hour 30 minutes	320 hours
1000	60-70cm (24-28in.) under a fluorescent light (30W)	11 hours	45 minutes	158 hours
3000	20cm (8in.) under a fluorescent light (30W)	3 hours 30 minutes	15 minutes	53 hours
10000	Exterior, cloudy	1 hour	5 minutes	17 hours
100000	Exterior, summer, sunny	14 minutes	2 minutes	6 hours


<Cal. B810>

Illuminance (lux)	Environment	Time required		
		From the stop state to the one second movement	One day usage	Empty to full
500	Inside an ordinary office	22 hours	1 hour 30 minutes	320 hours
1000	60-70cm (24-28in.) under a fluorescent light (30W)	11 hours	45 minutes	160 hours
3000	20cm (8in.) under a fluorescent light (30W)	3 hours 30 minutes	15 minutes	53 hours
10000	Exterior, cloudy	1 hour	5 minutes	16 hours
100000	Exterior, summer, sunny	8 minutes	1 minutes	4 hours


Full recharging timeThe time for fully recharge from stopped.
(Empty to full)

One day usageThe time required for the watch to run for one day with one second interval movement.

E. In These Cases

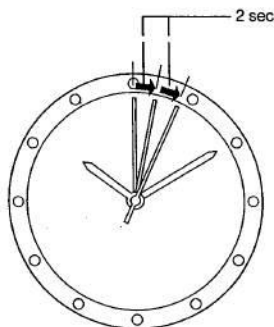

Two-second interval movement

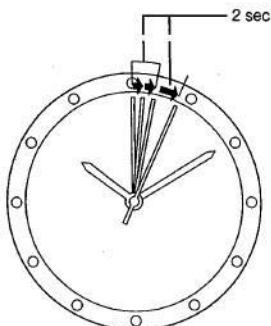

Hitch movement

[If the watch warns that the energy is running short]

The second hand starts moving at two-second increments in order to warn that the watch will stop functioning approximately after 3 days. **(Insufficient charge warning function)**

In such a case, expose the watch to light for a while to cancel the warning. (The second hand returns to the movement at one-second increments when the energy is recharged.)

If the watch is left short of energy, it will stop functioning after 3 days or so.

[If the watch warns to set the time.]

When the watch that has stopped is exposed to light, the second hands starts hitch movement. **(Quick start function)**

The time elapsed before the second hand restarts moving depends on the illuminance of the light.

After this also, the second hand keeps hitch movement to show that the watch indicates an incorrect time because it once stopped. **(Time setting warning function)**

In such a case, set the hands to the correct time.

* If the watch is insufficiently exposed to light, the second hand will soon switch to the movement at two-second increments in order to warn that the energy is running short.

F. Care for Handling of Charge

■ Notes on Use <Give the following precaution and explanation to the user.>

Take care to charge during use.

Please note that if the user wears long sleeves, the watch can easily become insufficiently charged because it is hidden and not exposed to light.

- When the user takes off the watch, it should be placed in as bright a place as possible, and it will always continue to run properly.

■ Notes on Recharge

- Avoid recharging at high temperatures (over about 60°C/140°F), otherwise the watch will be damaged during recharging.

(eg) Charging the watch near a light source that easily becomes hot, such as an incandescent lamp or a halogen lamp.

Charging in a place that easily becomes hot, such as a dashboard.

When you charge the watch by an incandescent lamp, take a distance about 50cm (20in.) from the light source to prevent extremely high temperature.

G. Replacing the Secondary Battery

This watch uses the secondary battery, which does not have to be periodically replaced due to repeated charging and discharging, unlike ordinary batteries.

Caution

Never use a battery other than the secondary battery used in this watch.


The watch structure is so designed that a different kind of battery other than the specified cannot be used to operate it. In case a different kind of battery such as a silver battery is used by some chance, there is a danger that the watch will be overcharged to burst, causing damage to the watch and even to the human body.

§4. PRECAUTIONS FOR DISASSEMBLY AND ASSEMBLY

A. How to Pull Out Setting Stem from One-piece Case

1. When removing the setting stem from the case

- Pressing down the end of the unlocking lever for setting stem from above, pull out the setting stem.

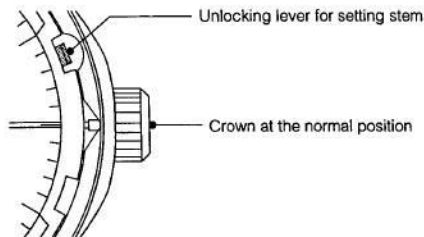

<Procedure>

- Set the crown at the normal position (Push it in).
- Lightly press the end of the unlocking lever for setting stem with a screwdriver, etc. from above.
- With the lever pressed, pull out the setting stem.


2. When removing the setting stem from the movement

- Pressing the base of the unlocking lever for setting stem ("PUSH →" position), pull out the setting stem.

<Note>

When the movement has been removed from the case, do not press the end of the unlocking lever for setting stem. If it is pressed in this case, it may be pressed too much to deform itself, circuit unit supporter, etc. since there is not a stopper.

If the movement is installed to the case with any part deformed, the setting stem may not be pulled out even if the unlocking lever for setting stem is pressed.

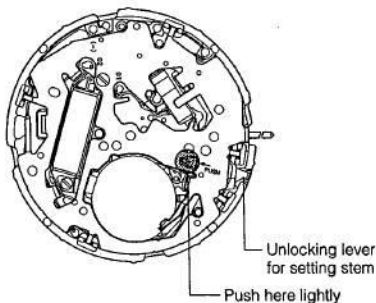

<Procedure>


- Set the crown at the normal position (Push it in).
- Lightly press the base of the unlocking lever for setting stem ("PUSH →" position) with a screwdriver, etc. from above.
- With the lever pressed, pull out the setting stem.

B. Precautions for Removal and Setting of Solar Cell

1. Precautions for handling of solar cell


- If the top of the solar cell is damaged, its charging capacity and other functions are lowered. Accordingly, sufficiently take care not to damage the top of the solar cell when removing and setting it.
- If the electrodes are stained or flaked off, a continuity trouble occurs. Since it is difficult to clean the top of solar cell, do not touch them with a finger, etc.

2. Removing and setting methods of solar cell (Only Cal. B800)

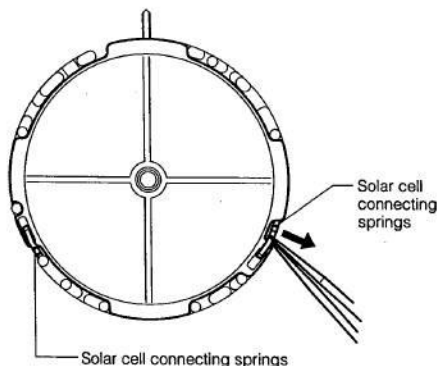


<Removing method of solar cell>

Slide the contacts of the contact springs for solar cell at two places (7 o'clock side and 11 o'clock side) on the upper side outward with tweezers, etc. to remove the solar cell.

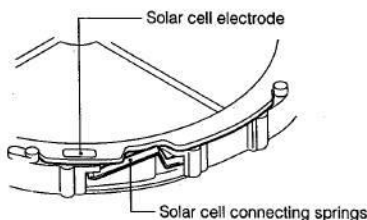

<Setting method of solar cell>

- (1) Place the solar cell on the movement, matching it to the dowel of the supporter for plate complete. (Confirm that the contact springs for solar cell is matched to the electrodes of the solar cell.)

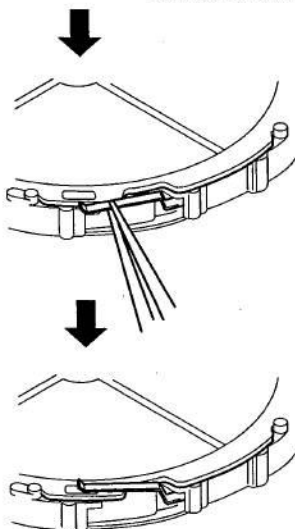

- (2) Lightly press the top of the solar cell.

- (3) Insert the contact springs by tweezers. Open the solar cell connecting spring horizontally from underside and lift it up to move the spring contact to the top side of the solar cell.

* Take care not to deform the spring by applying a too large force. Deformation of the spring can cause a contact trouble, etc.


§5. DISASSEMBLY AND ASSEMBLY OF MOVEMENT (Cal. B800)

Disassembly procedure: ① → ③⑤


Assembly procedure: ③⑤ → ①

● Lubrication mark

- ⊖ : A-Lube oil
- ∇ : V-Lube oil
- ⊕ : F-Lube oil
- : CH-1 oil.

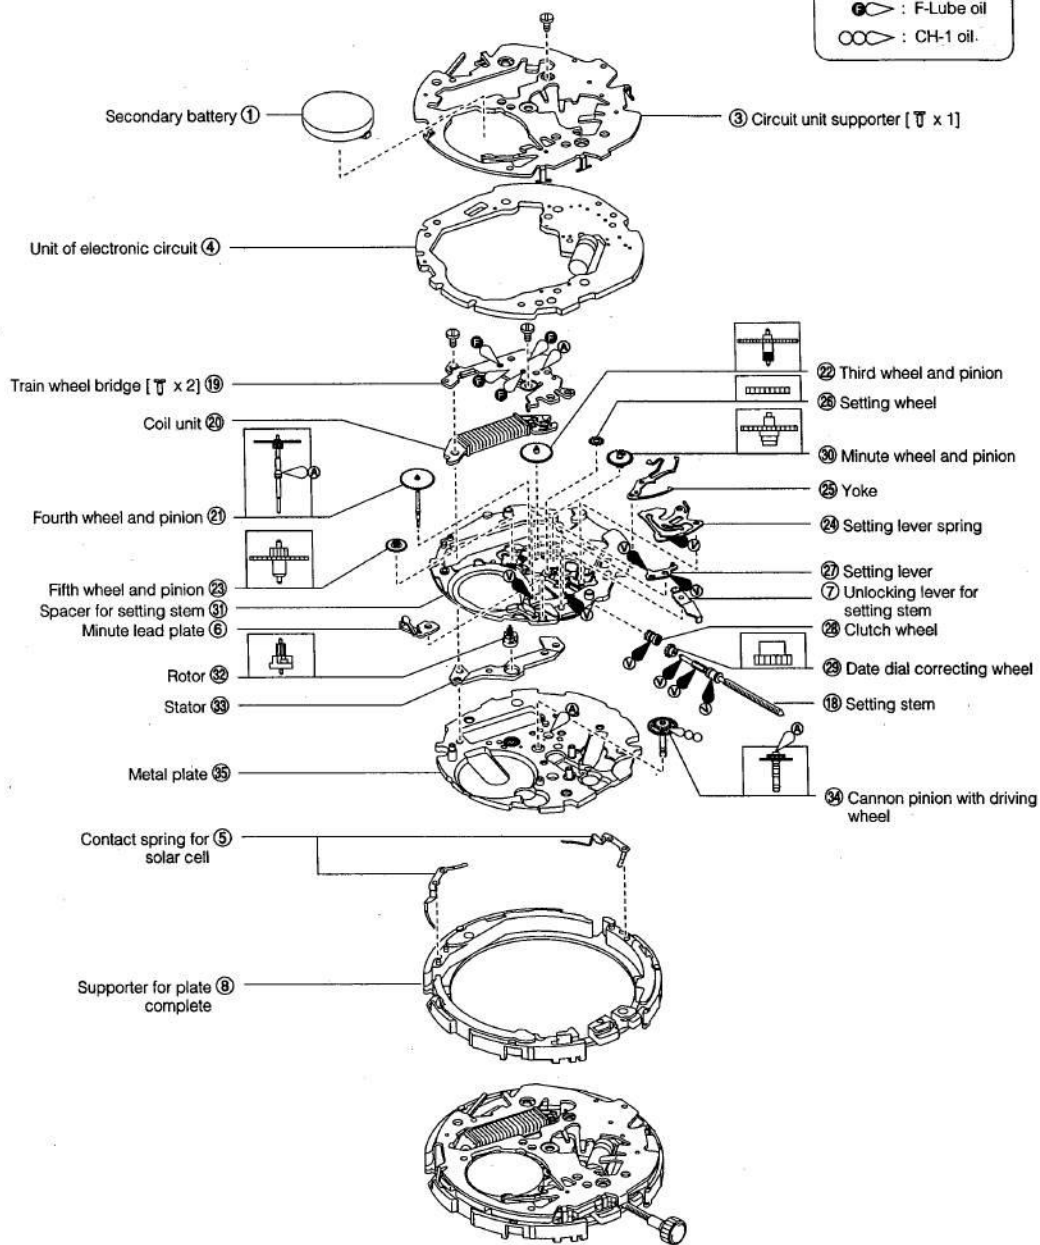

* Use the movement holder No. B80 for disassembly and assembly.

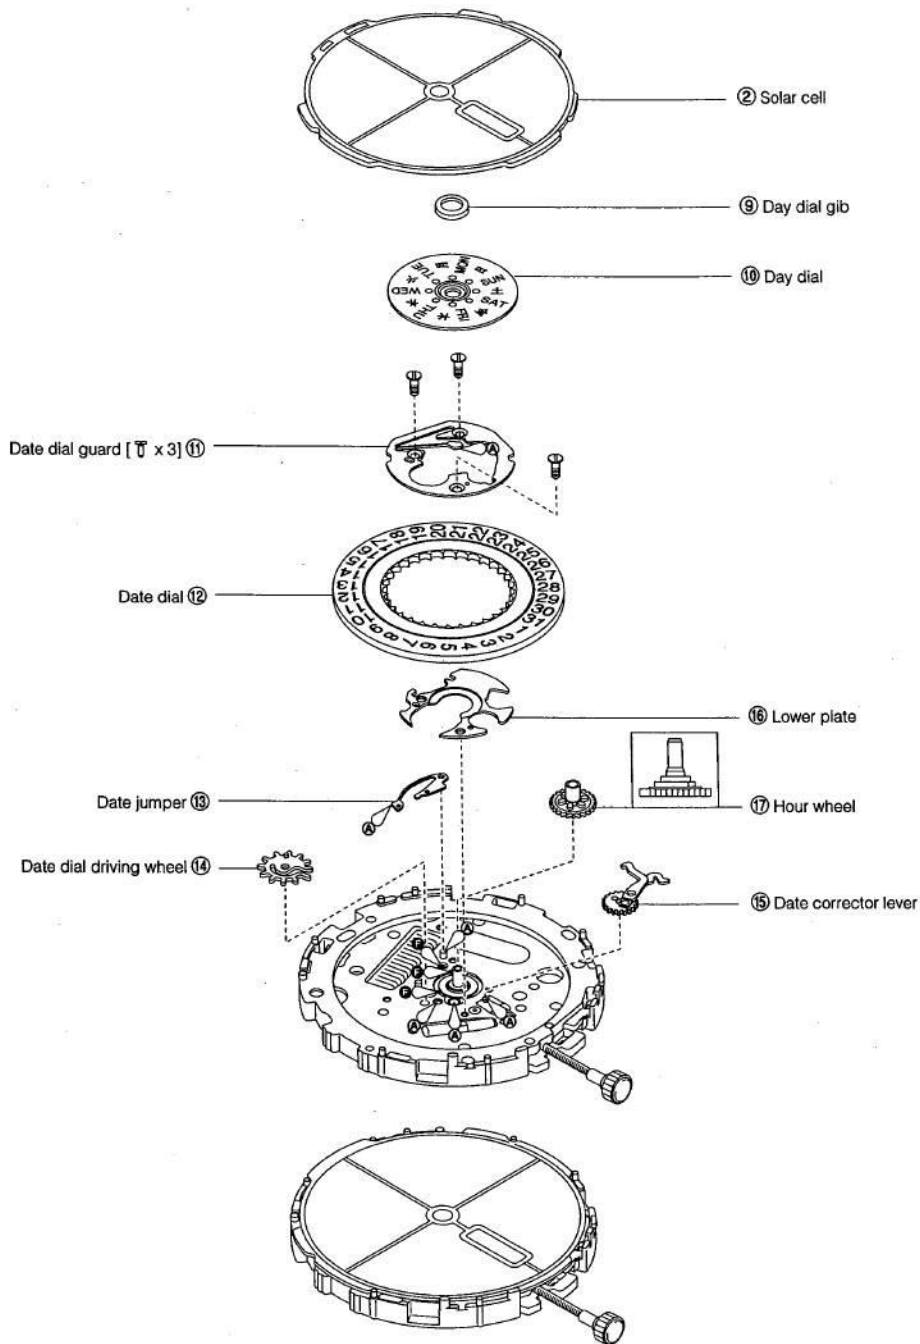

§6. DISASSEMBLY AND ASSEMBLY OF MOVEMENT (Cal. B810)

Disassembly procedure: ① → ③⑤

Assembly procedure: ③⑤ → ①


● Lubrication mark

⊖ : A-Lube oil


∇ : V-Lube oil



⊖ : F-Lube oil

○ : CH-1 oil

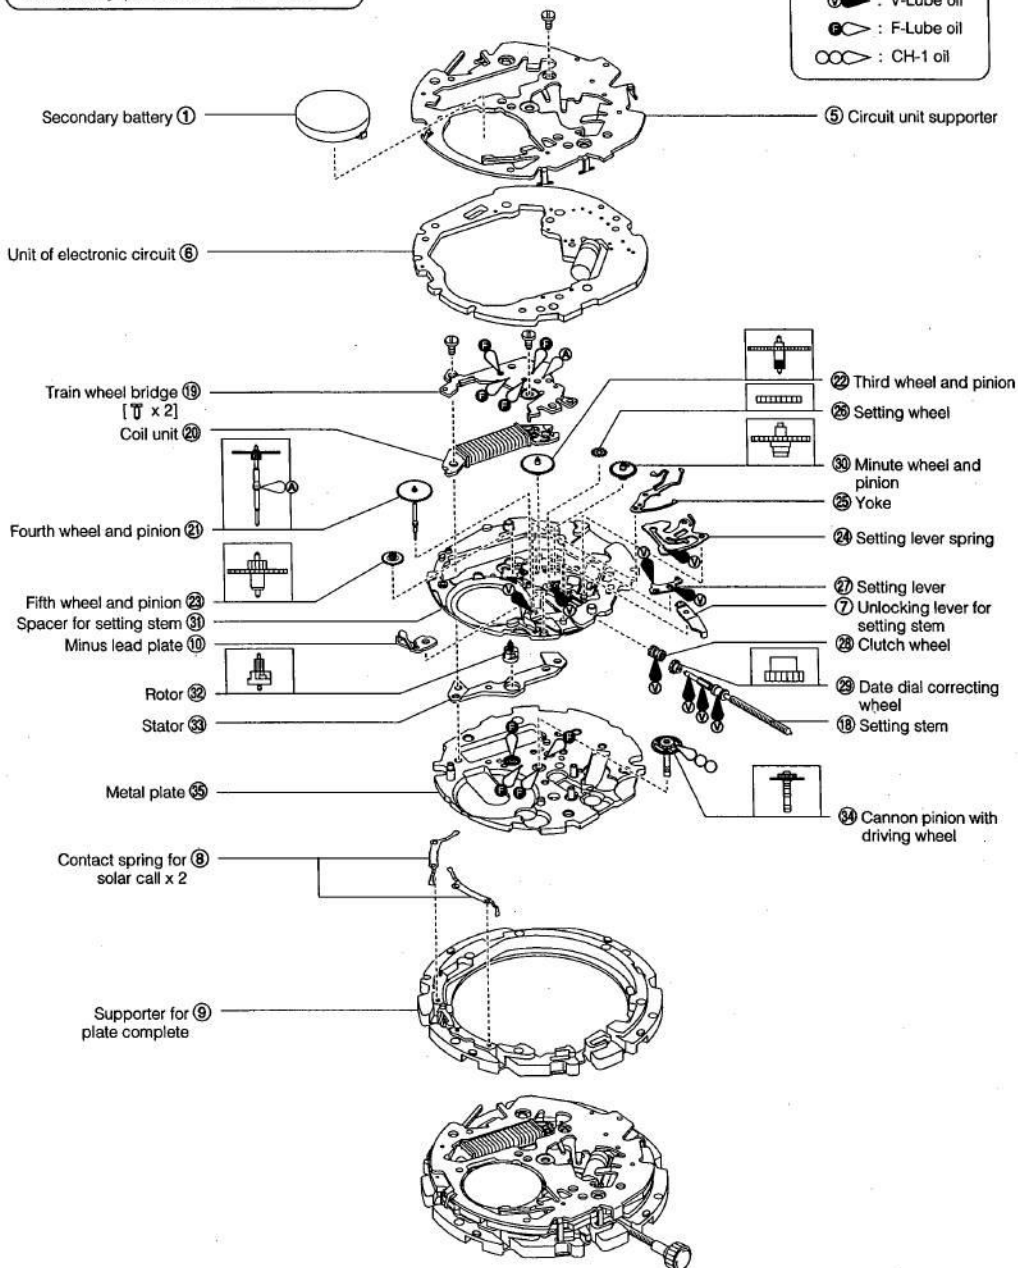


* Use the movement holder No. B81 for disassembly and assembly.

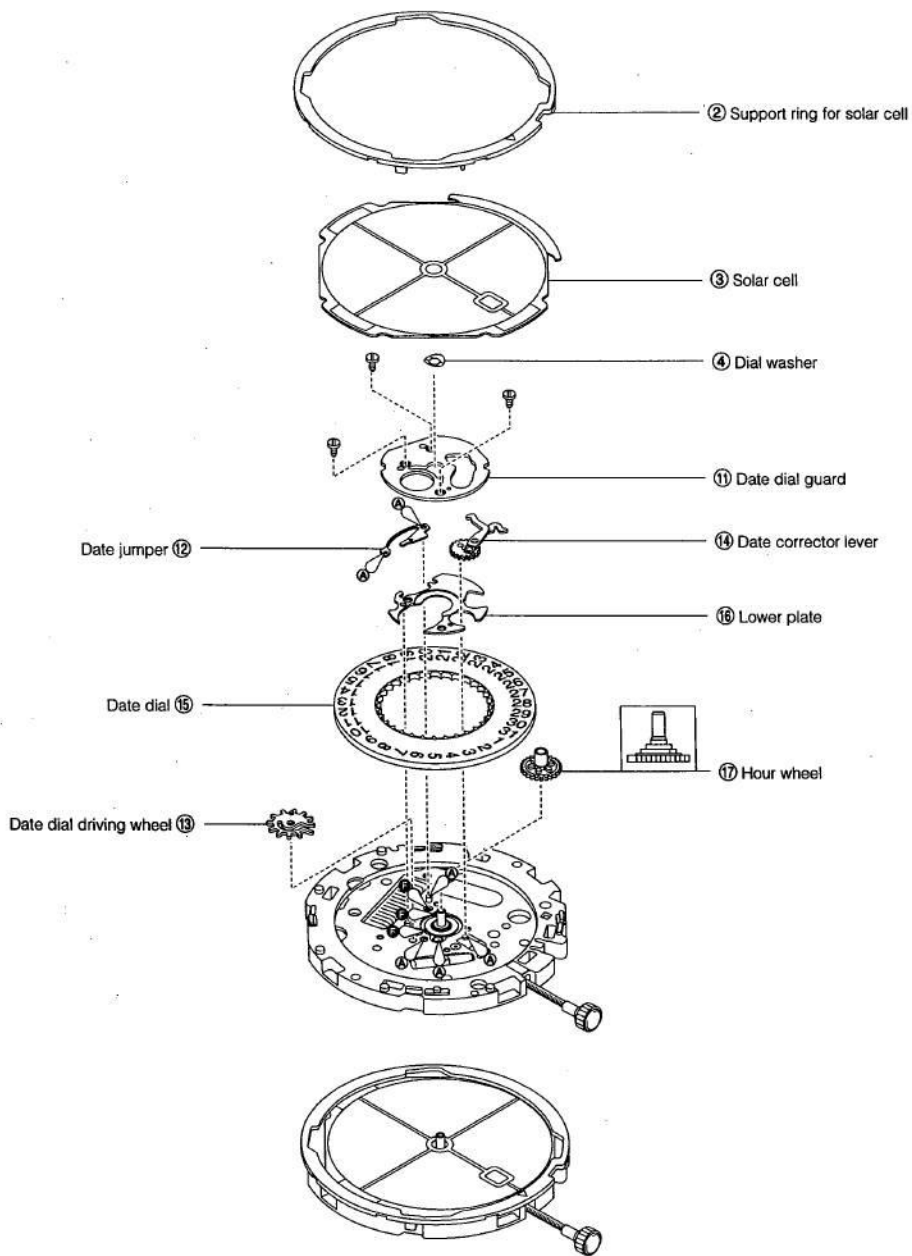

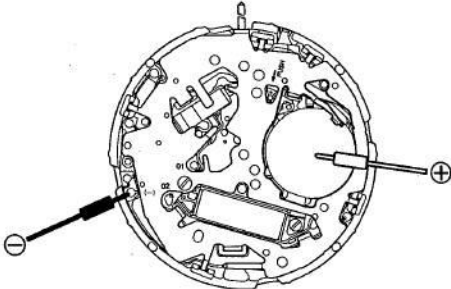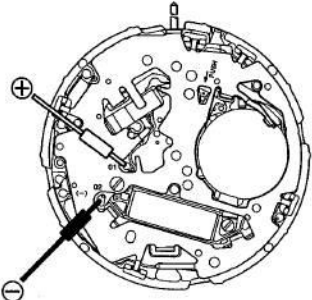Check Items	How to Check	Results and Treatments
<p>① Measurement of secondary battery voltage</p>	<p style="text-align: right;"><Tester range: DC. 3V></p>  <p>Reference:</p> <ul style="list-style-type: none"> • 0.9V ~ 1.3V: Two-second interval movement mode • 1.3V ~ 2.6V: One-second interval movement mode <p>These voltages may vary slightly from watch to watch.</p> <ul style="list-style-type: none"> • Hitch movement is a function that signals that the watch has stopped and restarted. This mode will continue until the watch is set to the correct time, irrespective of the voltage. • A quick-start is activated by the small-capacity tantalum capacitor which has been incorporated in the circuit, in addition to the primary secondary battery. After the watch is illuminated (right after it begins running), the secondary battery voltage will display an extremely low value because the secondary battery has not been fully charged. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Note: When measuring the voltage, be careful not to place the ⊖ tester pin on the secondary battery strap (a short circuit will occur.)</p> </div>	
<p>② Confirmation of output signal</p>	<p style="text-align: right;"><Tester range: DC. 0.3V></p>  <p>* Refer to Technical Manual, Basic Course: II-1-b.</p> <ul style="list-style-type: none"> • In the 1-second interval movement mode, the tester pointer should moves to the right and left every 1 second. • In the 2-second interval movement or hitch movement mode, the test pointer moves in only one direction every 2 seconds. 	<ul style="list-style-type: none"> • Tester pointer swings. → Normal. • Tester pointer does not swing. → Check connections. <p style="text-align: center;">↓</p> <ul style="list-style-type: none"> • Connections are normal. → Replace the electronic circuit.

Check Items	How to Check	Results and Treatments
③ Check of connection parts	<ul style="list-style-type: none"> * Refer to Technical Manual, Basic Course: II-2-a. • Check for looseness of screws, dust, stain, etc. • Check for stain and removal of the solar cell pattern (two places), deformation of connection spring, removal of welded lead plate of the secondary battery, stain of the circuit pattern, bad contact of each part. 	<p>Stain of solar cell pattern and circuit pattern. → Remove stain.</p> <p>Removal of solar cell pattern, removal of circuit pattern, removal of welded lead plate of secondary battery. → Replace parts.</p>
④ Measurement of coil resistance	<ul style="list-style-type: none"> * Refer to Technical Manual, Basic Course: II-1-c. • Remove the unit of electronic circuit and measure the coil resistance <p style="text-align: right;"><Tester range: R x 10Ω></p> <p><The tester lead pins have no polarity></p>	<ul style="list-style-type: none"> • 2.0 kΩ - 2.4 kΩ → Normal • Out of above range → Replace coil unit
⑤ Check of train wheel	<ul style="list-style-type: none"> * Refer to Basic Course: II-2-b. 	
⑥ Check of dial side mechanism	<ul style="list-style-type: none"> * Refer to Basic Course: II-2-c. 	
⑦ Check of solar cell	<ul style="list-style-type: none"> • Check the solar cell for breakage and stain, and check its electrode for stain and flaking. 	<ul style="list-style-type: none"> • Breakage of solar cell → Replace solar cell. • Stain → Remove stain. • Flaking of electrode → Replace solar cell.
⑧ Measurement of time rate	<ul style="list-style-type: none"> * Refer to Basic Course: II-2-d. <p style="text-align: right;"><Measurement gate: Analog 10 sec></p> <ul style="list-style-type: none"> • The time rate cannot be adjusted. • The time rate may not be measured accurately in the 2-second interval movement or hitch movement. In this case, apply light to the watch until the second hand moves in the 1-second interval movement mode, then measure the time rate. 	<ul style="list-style-type: none"> • The watch loses or gains substantial time → Replace the unit of electronic circuit
⑨ Confirmation of using condition	<ul style="list-style-type: none"> * Refer to Basic Course: II-2-e. • Since this watch is energized by light, it should receive light as much as possible. If the watch is placed near a light source which generates heat (above 60°C) such as an incandescent lamp, a halogen lamp, etc., its functions and parts may be deteriorated or deformed by the heat. Accordingly, take care when applying light to it. <p>Example: When the watch is hidden under a long sleeve or the customer works in a dark place, it needs to be exposed to light on purpose.</p>	

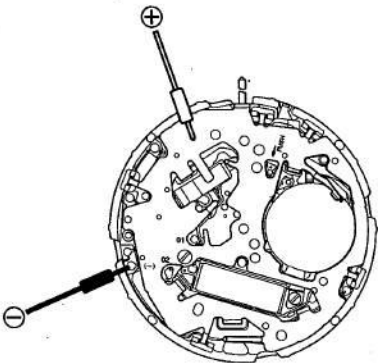Check Items	How to Check	Results and Treatments
<p>⑩ Measurement of current consumption</p>	<ul style="list-style-type: none"> * Refer to Technical Manual, Basic Course: II-1-f. • This watch uses the secondary battery block, instead of a ordinary battery. Accordingly, prepare a silver battery (1.55V) and measure the current consumption according to the following procedure. <ol style="list-style-type: none"> (1) Remove the secondary battery. (2) Referring to Technical Manual, Basic Course, set the silver battery (1.55V) to the adapter of the tester correctly. (3) Pull the crown out. (4) Set the tester.  <p style="text-align: center;"><Tester range: DC 10μA></p> <ul style="list-style-type: none"> (5) Return the crown to the normal position and measure the current consumption of the movement. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Note: When measuring the current consumption, do not apply any light to the solar cell. If any light is applied, the voltage changes and correct current consumption cannot be measured.</p> </div>	<ul style="list-style-type: none"> • Current consumption of the movement <ul style="list-style-type: none"> Under 1.2μA → Normal Over 1.2μA → Check train wheel and dial-side mechanism. → Remove dust and dirt. <p style="text-align: center;">↓</p> <ul style="list-style-type: none"> • Current consumption measured again <ul style="list-style-type: none"> Over 1.2μA → Replace the unit of electronic circuit.
<p>⑪ Check of appearance and function</p>	<ul style="list-style-type: none"> * Refer to Basic Course: II-2-f. 	