

SEIKO

DIGITAL STOPWATCH

CAL. W073

You are now the proud owner of a SEIKO Digital Stopwatch Cal. W073. For best results, please read the instructions in this booklet carefully before using your SEIKO Digital Stopwatch. Please keep this manual handy for ready reference.

WARNING

NOTES ON THE BATTERY

- Do not remove the battery from the stopwatch.
- If it is necessary to take out the battery, keep it out of the reach of children. If a child swallows it, consult a doctor immediately.
- Never short-circuit, heat or otherwise tamper with the battery, and never expose it to fire. The battery may burst, become very hot or catch fire.
- The battery is not rechargeable. Never attempt to recharge it, as this may cause battery leakage or damage to the battery.

NOTES ON THE STRAP

- The stopwatch has a strap for wearing the stopwatch around your neck. Take good care lest it should be caught by something near you or wind around your neck.
- Please also note that the strap may damage your clothes, or injure your hands, neck or other parts of your body.

TO PRESERVE THE QUALITY OF YOUR STOPWATCH



● WATER RESISTANCE (3 bar)

Your stopwatch is designed and manufactured to withstand up to 3 bar, such as accidental contact with splashes of water or rain, but it is not designed for swimming or diving. Do not operate the buttons when the stopwatch is wet or in water.



● TEMPERATURES

If the stopwatch is left in direct sunlight for a long time, the display may become black, but this condition will be corrected when the stopwatch returns to normal temperature.

Do not leave your stopwatch in very low temperatures below -5°C ($+23^{\circ}\text{F}$) for a long time since the cold may cause:

- a slight time loss or gain.
- the change of digits to become slow.
- the display light to dim.

However, the above conditions will be corrected when the stopwatch returns to normal temperature.



● SHOCKS

Do not subject it to violent shocks.



● MAGNETISM

Your stopwatch will not be affected by magnetism.



● CHEMICALS

Be careful not to expose the stopwatch to solvents, mercury, cosmetic spray, detergents, adhesives or paints. Otherwise, the case, etc. may become discolored, deteriorated or damaged.



● PERIODIC CHECK

It is recommended that the stopwatch be checked once every 2 to 3 years. Have your stopwatch checked by an AUTHORIZED SEIKO DEALER or SERVICE CENTER to ensure that the case, buttons, gasket and crystal seal remain intact.



● PRECAUTION REGARDING CASE BACK PROTECTIVE FILM

If your stopwatch has a protective film and/or a sticker on the case back, be sure to peel them off before using your stopwatch.



● STATIC ELECTRICITY

The IC (Integrated Circuit) used in your stopwatch will be affected by static electricity which may disturb the display. Keep your stopwatch away from close contact with objects such as TV screens which emit strong static electricity.



● LIQUID CRYSTAL PANEL

The normal life expectancy for a liquid crystal panel is approximately 5 years. After that it may decrease in contrast, becoming difficult to read. Please contact your AUTHORIZED SEIKO DEALER or SERVICE CENTER if you wish to have a new panel fitted (guaranteed one year).

FEATURES

STOPWATCH

- Measures up to 100 hours in 1/100 seconds for the first hour and in seconds thereafter.
- Lap time and split time measurements are available.

MEMORY RECALL

- Up to 10 newest lap times and split times can be stored in memory. They can be recalled either during or after the measurement.


TIME/CALENDAR

- Month, day, date, hour, minutes and seconds are displayed. The calendar automatically adjusts for odd and even months including February of leap years from January 1, 2003 up to December 31, 2052.
- Changeover between 12- and 24-hour indications

ALARM

- Can be set to ring once daily at a designated time.

MODE CHANGE

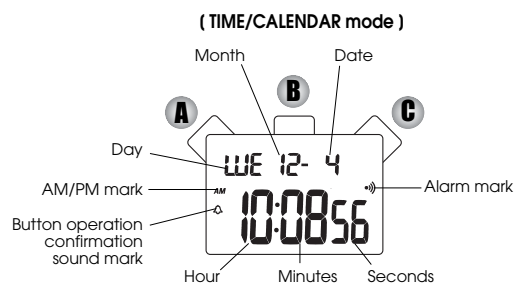

- B** With each press, the mode changes in the following order.




- ◆ When the button operation confirmation sound is switched on, a beep sounds with each press of button B. As a reference aid, the tone is different when the TIME/CALENDAR mode appears.

- ◆ If " " is displayed in the TIME/CALENDAR, MEMORY RECALL or ALARM mode, the measurement is in progress in the STOPWATCH mode.

MEMORY RECALL FUNCTION

- Up to 10 newest sets of lap times and split times can be stored and recalled either during or after the measurement.

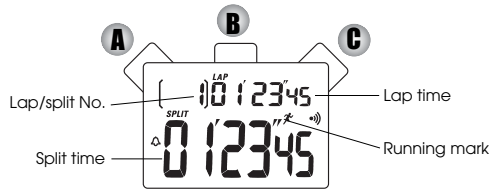

* The running mark is shown while the measurement is in progress.

- B** Press to show the MEMORY RECALL mode.

* In memory recall after measurement, the oldest measurement stored in memory is displayed first.
 In memory recall during measurement, the newest one is displayed first.
 * The lap/split No. assigned during measurement is shown in the MEMORY RECALL mode.


- C** With each press, the stored data are recalled successively from the oldest to the newest.

or

- A** With each press, the stored data are recalled successively from the newest to the oldest.

- B** Press to go to the ALARM mode.

- If no lap time/split time measurement is made in the STOPWATCH mode and no data is stored in memory, the display shown at right will appear when the mode is changed over to the MEMORY RECALL.
- Even if the stopwatch is reset to "00", stored data is not erased and can be recalled unless a new measurement is started.
- The stopwatch can measure the lap time/split time as many times as necessary, but only the 10 newest sets of lap/split times are stored in memory.



BATTERY CHANGE

2
Years

The miniature battery which powers your stopwatch should last approximately **2 years**. However, because the battery is inserted at the factory to check the function and performance of the stopwatch, its actual life once in your possession may be less than the specified period. When the battery expires, be sure to replace it as soon as possible to prevent any malfunction. For battery replacement, we recommend that you contact an AUTHORIZED SEIKO DEALER and request **CR2025** battery.

- * The battery life may be less than 2 years if:
- the alarm is used more than once a day, and/or
 - the confirmation sound is used more than 50 times a day.

Necessary procedure after battery change

After the battery is replaced with a new one, or an abnormal display (broken digits, etc.) appears, follow the procedure below to reset the IC.

Press and hold buttons A, B and C at the same time for 2 to 3 seconds.

- * The display shown at right appears when the buttons are released.
 * Before using the stopwatch, set the time/calendar and then the alarm.



SPECIFICATIONS


1	Frequency of crystal oscillator	32,768 Hz (Hz = Hertz ... Cycles per second)
2	Loss/gain (monthly rate)	Less than 30 seconds at normal temperature range (5° C ~ 35° C) (41° F ~ 95° F)
3	Operational temperature range	-5° C ~ +50° C (23° F ~ 122° F)
	Desirable temperature range of use	0° C ~ +40° C (32° F ~ 104° F)
4	Display system	
	TIME/CALENDAR mode	Year (only in the TIME/CALENDAR SETTING display), month, date, day of the week, hour, minutes and seconds AM/PM mark in the 12-hour indication (Alarm mark and button operation confirmation sound mark)
	STOPWATCH mode	Measures up to 100 hours. Hour, minutes, seconds and 1/100 seconds (for the first 1 hour). Lap/split No., "LAP" and "SPLIT" marks. (Alarm mark and button operation confirmation sound mark)
	MEMORY RECALL mode	Hour, minutes, seconds and 1/100 seconds. Lap/split No., "LAP" and "SPLIT" marks. (Alarm mark and button operation confirmation sound mark)
	ALARM mode	Alarm time (hour and minutes), alarm mark and "on"/"--" mark. AM/PM mark in the 12-hour indication
5	Display medium	Nematic Liquid Crystal, FEM (Field Effect Mode)
6	Battery	CR2025, 1 piece
7	IC (Integrated Circuit)	C-MOS-LSI, 1 piece

* The specifications are subject to change without prior notice for product improvement.

ALARM

- The alarm can be set to ring on a 24-hour basis.
- At the designated time, the alarm rings for 20 seconds.

ALARM TIME SETTING

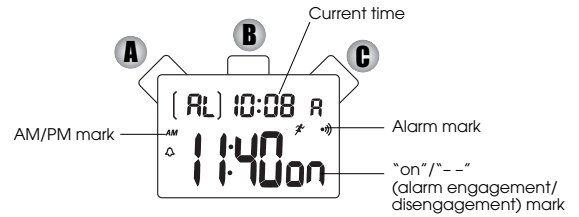

- B** Press to show the ALARM mode.

- A** Press and hold for 2 seconds to show the ALARM SETTING display.

- C** Press repeatedly to select the digits (flashing) to be adjusted.



- A** Press to set the flashing digits.


- B** Press to return to the ALARM mode.

* The alarm and "on" marks are displayed and the alarm is automatically engaged.

- In the alarm time setting, the flashing digits move quickly if button A is kept pressed.
- When the time function is displayed in the 24-hour indication, the alarm is also displayed in the 24-hour indication.
- When setting the hour digits in the 12-hour indication, check that AM/PM is properly set.
- If the watch is left untouched in the ALARM SETTING display with the digits flashing, it will automatically return to the ALARM mode in 2 to 3 minutes.

ALARM ENGAGEMENT/DISENGAGEMENT

- C** With each press in the ALARM mode, the alarm is alternately engaged and disengaged.

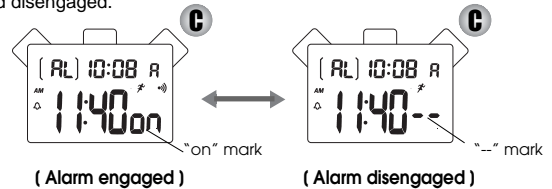

- * At the designated time the alarm rings for 20 seconds. To stop it manually, press any of the three buttons. The alarm can be stopped manually in any mode by pressing a button.

SOUND DEMONSTRATION



- A & C** The alarm sound can be demonstrated by keeping buttons A and C pressed at the same time in the TIME/CALENDAR mode.