

Operation Guide 5590




ENGLISH

Congratulations upon your selection of this CASIO watch.

To ensure that this watch provides you with the years of service for which it is designed, carefully read and follow the instructions in this manual, especially the information under "Operating Precautions" and "User Maintenance".

E

About This Manual

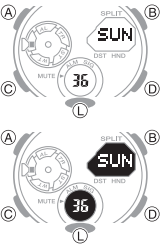

- Depending on the model of your watch, display text appears either as dark figures on a light background, or light figures on a dark background. All sample displays in this manual are shown using dark figures on a light background.
- Button operations are indicated using the letters shown in the illustration.
- Note that the product illustrations in this manual are intended for reference only, and so the actual product may appear somewhat different than depicted by an illustration.

E-1

Things to check before using the watch

- 1. Check the Home City and the daylight saving time (DST) setting.**
Use the procedure under "To configure Home City settings" (page E-18) to configure your Home City and daylight saving time settings.
- Important!**
- Proper World Time Mode data depends on correct Home City, time, and date settings in the Timekeeping Mode. Make sure you configure these settings correctly.
- 2. Set the current time.**
See "Adjusting the Digital Time and Date Settings" (page E-21).
- The watch is now ready for use.**

E-2

Contents

About This Manual	E-1
Things to check before using the watch	E-2
Mode Reference Guide	E-8
Timekeeping	E-15
To swap your Home City and World Time City	E-17
Configuring Home City Settings	E-18
To configure Home City settings	E-18
To change the Daylight Saving Time (summer time) setting	E-20
Adjusting the Digital Time and Date Settings	E-21
To configure the digital time and date settings	E-21
	E-3

Checking the Current Time in a Different Time Zone	E-25
To enter the World Time Mode	E-26
To view the time in another time zone	E-26
To specify standard time or daylight saving time (DST) for a city	E-27
Using the Stopwatch	E-28
To enter the Stopwatch Mode	E-28
To perform an elapsed time operation	E-29
To pause at a split time	E-29
To measure two finishes	E-29
Countdown Timer	E-32
To enter the Countdown Timer Mode	E-32
To configure the countdown timer	E-33
To perform a countdown timer operation	E-34
To stop the alarm	E-34

E-4

Using the Alarm	E-35
To enter the Alarm Mode	E-35
To set an alarm time	E-36
To test the alarm	E-37
To turn an alarm and the Hourly Time Signal on and off	E-38
To stop the alarm	E-38
Illumination	E-39
To turn on illumination	E-39
To change the illumination duration	E-40
Adjusting Hand Positions	E-41
Button Operation Tone	E-43
To turn the button operation tone on and off	E-44

E-5

Troubleshooting	E-45
Main Indicators	E-47
Specifications	E-48
Operating Precautions	E-51
User Maintenance	E-62

E-6

E-7

Mode Reference Guide

The mode you should select depends on what you want to do.

To do this:	Enter this mode:	See:
• View the current date in the Home City • Configure Home City and daylight saving time (DST) settings • Configure time and date settings • View the World Time city and time • Swap Home Time and World Time information • Change the display illumination duration setting • Enable/disable the button operation tone	Timekeeping Mode	E-15
View the current time in one of 48 cities (31 time zones) around the globe	World Time Mode	E-25
Use the stopwatch to measure elapsed time	Stopwatch Mode	E-28
Use the countdown timer	Countdown Timer Mode	E-32

E-8


To do this:	Enter this mode:	See:
Set an alarm time	Alarm Mode	E-35

E-9

Selecting a Mode

- Press **(C)** to cycle between the modes as shown below.
- In any mode, press **(L)** to illuminate the display.

- To return to the Timekeeping Mode from any other mode, hold down **(C)** for at least two seconds.

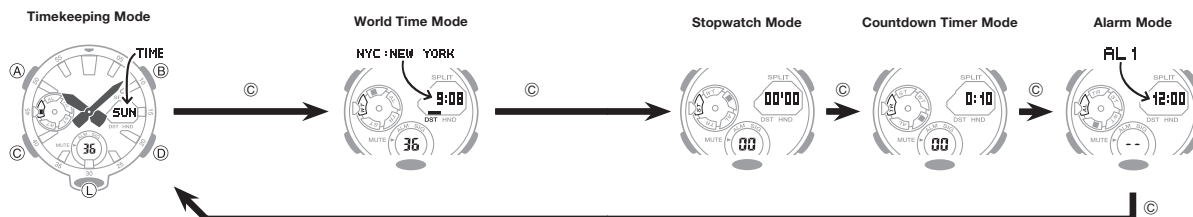

E-10

E-11

General Functions (All Modes)

The functions and operations described in this section can be used in all modes.

Auto Return

If you do not perform any operation for about two or three minutes while configuring settings (setting flashing on the digital display) in any mode, the watch will exit the setting operation and return to normal display.

Scrolling

The **(B)** and **(D)** are used on the setting mode to scroll through data on the display. In most cases, holding down these buttons during a scroll operation scrolls through the data at high speed.

Moving the Hands Out of the Way for Better Viewing

You can use the procedure below to temporarily move the hour and minute hands out of the way to better view what is on the display.


- This operation can be performed in any mode. In the case of a setting mode (setting flashing on the screen), the hands will move out of the way automatically, even if you do not perform the below operation.

1. Press **(L)** twice.

- This will cause the hour and minute hands to move to a location where they do not block your view of the digital display.

Example: When the current time is 8:30

Flashes while the hands are moved out of the way.

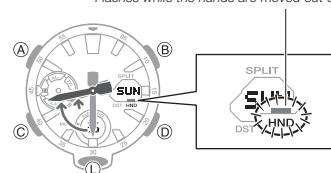

E-12

E-13


- Pressing **(L)** twice again will cause the hands to return to their normal positions (normal timekeeping).

Note

- Watch button functions are the same regardless of whether the hands are moved out of the way or at their normal positions.
- Changing to another mode will cause the hands to move back to their normal positions.
- The hands also will move back to their normal positions automatically if no operation is performed for about one hour.

Timekeeping

Use the Timekeeping Mode to set and view the current time and date.

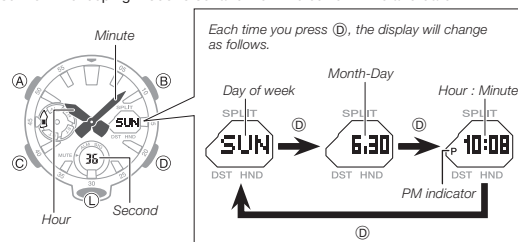

E-14

E-15


- To view the Home City name (English), press **(A)**.
- To view the World Time city code followed by the current time there, press **(B)**.
- To swap the Home City and World Time city information, hold down **(B)** for at least three seconds.

To swap your Home City and World Time City

In the Timekeeping Mode, hold down **(B)** for at least three seconds.

This will cause **SWAP** to flash on the display, and then your Home City and World Time City will be swapped.

Example: To swap the Home City (TYO) and World Time City (NYC)

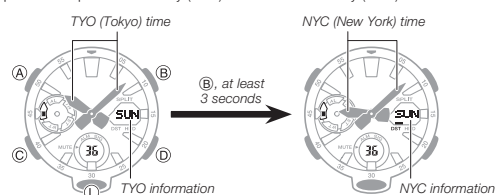

E-16


E-17

Configuring Home City Settings

There are two Home City settings: actually selecting the Home City, and selecting either standard time or daylight saving time (DST).

To configure Home City settings

- In the Timekeeping Mode, hold down **(A)** until the flashing **SET** indicator disappears from the display and the currently selected city code appears on the display.
 - This indicates the Home City setting mode.
- Use **(D)** (+) and **(B)** (-) to scroll through city codes until the one you want is displayed.
 - For details about city codes, see the "City Code Table" at the back of this manual.
- After the setting is the way you want, press **(A)** to return to the Timekeeping Mode.

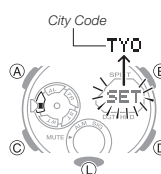

Note

- After you specify a city code, the watch will use UTC* offsets in the World Time Mode to calculate the current time for other time zones based on the current time in your Home City.

* Coordinated Universal Time, the world-wide scientific standard of timekeeping. The reference point for UTC is Greenwich, England.

E-18

E-19

To change the Daylight Saving Time (summer time) setting

- In the Timekeeping Mode, hold down (A) until the flashing SET indicator disappears from the display and the currently selected city code appears on the display.
- Press (C) to display the DST setting mode.
- Press (D) or (B) to toggle between Daylight Saving Time (ON) and Standard Time (OFF).
 - Note that you cannot switch between daylight saving time and standard time while UTC is selected as your Home City.
- After the setting is the way you want, press (A) to return to the Timekeeping Mode.
 - The DST indicator appears to indicate that Daylight Saving Time is turned on.

E-20


Adjusting the Digital Time and Date Settings

Use the procedure below to adjust the digital time and date settings.

To configure the digital time and date settings

- In the Timekeeping Mode, hold down (A) until the flashing SET indicator disappears from the display and the currently selected city code appears on the display.

- Press (C) to move the flashing in the sequence shown below to select the other settings.

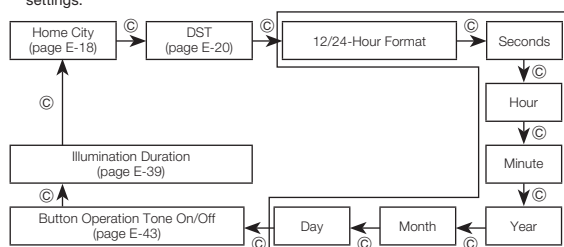

E-22

- When the timekeeping setting you want to change is flashing, perform the operation described below.

Screen	To do this:	Do this:
1:24	Toggle between 12-hour (12H) and 24-hour (24H) timekeeping	Use (D) and (B).
36	Reset the seconds to 00	Press (D).
P 10:08	Change the hour or minute	Use (D) (+) and (B) (-) to change these settings.
20 19	Change the year	
6:30	Change the month or day	

- Press (A) to exit the setting mode.

E-21


Note

- Resetting the seconds to 00 while the current count is in the range of 30 to 59 causes the minutes to be increased by 1.
- The watch's built-in full automatic calendar makes allowances for different month lengths and leap years. Once you set the date, there should be no reason to change it except after you have the watch's battery replaced.
- While 12-hour format is selected for timekeeping, a P indicator will appear for times from noon to 11:59 p.m. No indicator appears for times from midnight to 11:59 a.m. With 24-hour format, time is displayed from 0:00 to 23:59, without any P indicator.
- The day of the week changes automatically when the date changes.

E-24

Checking the Current Time in a Different Time Zone

World Time City hour and minute

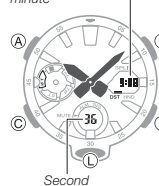

You can use the World Time Mode to view the current time in one of 31 time zones (48 cities) around the globe. The city that is currently selected in the World Time Mode is called the "World Time City".

- The hour and minute hands indicate information for the currently selected Home City.
- When you enter the World Time Mode, the currently selected city code and city name (English) scroll once across the digital display. After that, the current time in the World Time City is displayed.
- You can view the name (English) of your Home City by pressing (A).

E-25


To enter the World Time Mode

Use (C) to select the World Time Mode as shown on page E-10.

To view the time in another time zone

In the World Time Mode, use (D) and (B) to change the city code.

To specify standard time or daylight saving time (DST) for a city

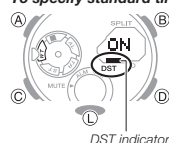

- In the World Time Mode, use (D) and (B) to display the city code (time zone) whose Standard Time/Daylight Saving Time setting you want to change.

- Hold down (A) for at least two seconds.

- This toggles the city code you selected in step 1 between Daylight Saving Time (DST indicator displayed) and standard time (DST indicator not displayed).
- Note that you cannot switch between standard time/daylight saving time (DST) while UTC is selected as the World Time City.
- The standard time/daylight saving time (DST) setting affects only the currently displayed city. Other cities are not affected.


E-26

E-27

Using the Stopwatch

The stopwatch measures elapsed time, split times, and two finishes.

- The stopwatch measures elapsed time in units of 1/100 seconds for the first hour, and in 1-second units after that for up to 24 hours total. After that, elapsed time reverts to zero and then stops.

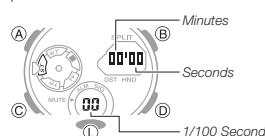

To enter the Stopwatch Mode

Use (C) to select the Stopwatch Mode as shown on page E-11.

E-28


To perform an elapsed time operation



To pause at a split time



To measure two finishes




E-29

- ### Note

-
- First hour
- Seconds
- Minutes
- SPLIT
- 08:06
- DST HND
- MUTE
- 48
- 1/100 Second
- After first hour
- Minutes
- Hours
- SPLIT
- 01:33
- DST HND
- MUTE
- 25
- Seconds


E-31

To configure the countdown timer

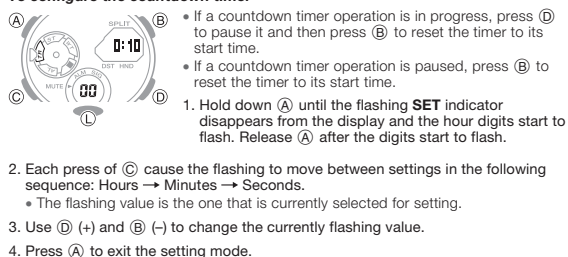

F-33

Using the Alarm

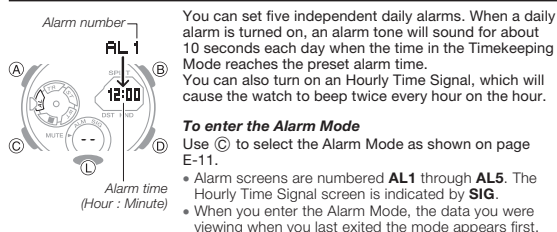

E-35

- ### To set an alarm time

1. In the Alarm Mode, use **(D)** and **(B)** to display the alarm settings you want to change.
2. Hold down **(A)** until the flashing **SET** indicator

2. Hold down **(A)** until the flashing **SET** indicator disappears from the display and the alarm time hour digits start to flash. Release **(A)** after the digits start to flash.
 - **ALM** appears on the display, indicating that alarm setting is enabled.

F-37

Illumination



Press **L** in any mode to illuminate the display.

- ### Note


- E-39

To change the illumination duration

1. In the Timekeeping Mode, hold down (A) until the flashing SET indicator disappears from the display and the currently selected city code appears on the display.
2. Press (C) ten times to display the illumination duration setting screen.
 - The current illumination duration setting (1 or 3) will be flashing in the display.
3. Press (D) or (B) to toggle the illumination duration between three seconds (3 displayed) and 1.5 seconds (1 displayed).
4. Press (A) to exit the setting mode.

E-40

Hour hand and minute hand

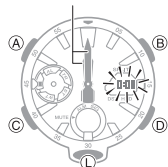

4. If the hour and minute hands are not at 12 o'clock, use (D) (+) and (B) (-) to adjust them until they are.
5. Press (A) to return to the Timekeeping Mode. Check to make sure that the time indicated by the hands matches the time on the digital display. If the times don't match, perform the correction procedure above again.

E-42

To turn the button operation tone on and off

1. In the Timekeeping Mode, hold down (A) until the flashing SET indicator disappears from the display and the currently selected city code appears on the display.
2. Press (C) nine times to display the button operation tone On/Off screen (page E-22). The screen will show either KEY or MUTE.
3. Press (D) or (B) to toggle the button operation tone setting between enabled (KEY) and disabled (MUTE).
4. Press (A) to exit the setting mode.

Note

- The mute indicator is displayed in all modes when the button operation tone is disabled.

E-44

World Time Mode

■ The time for my World Time City is off in the World Time Mode.

This could be due to incorrect switching between standard time and daylight saving time. See "To specify standard time or daylight saving time (DST) for a city" (page E-27) for more information.

E-46

Specifications

Accuracy at normal temperature: ±15 seconds a month

Digital Timekeeping: Hour, minutes, seconds, p.m. (P), month, day, day of the week

Time format: 12-hour and 24-hour

Calendar system: Full Auto-calendar pre-programmed from the year 2000 to 2099

Other: Home City code (can be assigned one of 48 city codes);

Standard Time/Daylight Saving Time (summer time)

Analog Timekeeping: Hour, minutes (hand moves every 20 seconds)


World Time: 48 cities (31 time zones) and Coordinated Universal Time (UTC)

Other: Daylight Saving Time/Standard Time; Home City/World Time City switching

E-48

Adjusting Hand Positions


The watch hands can go out of alignment with the time on the digital display if it is exposed to strong magnetism or impact. If this happens, you should adjust the hand positions.

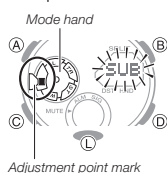

1. In the Timekeeping Mode, hold down (A) for at least five seconds until SUB starts to flash. Release (A) after SUB flashes.
 - This enters the mode hand adjustment mode.
2. If the mode hand is not pointed at the adjustment point mark (■) at 9 o'clock, use (D) and (B) to move it there.
 - Holding down either button moves the hands at high speed.
3. Press (C).
 - This causes 0:00 to flash to indicate the hour and minute hand adjustment mode.

E-41

Button Operation Tone

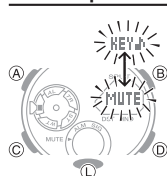

You can turn the button operation tone on or off as desired.

- Even if you turn off the button operation tone, alarms, the Hourly Time Signal, and other beepers all operate normally.

E-43

Troubleshooting

Hand Movement and Indications

■ The time indicated by the hands is different from the digital time.

This could indicate that the watch has been exposed to magnetism or strong impact, which has caused problems with proper hand alignment. Adjust the watch's hand home position alignment (page E-41).

Time Setting

■ The current time setting is off by hours.


Your Home City setting may be wrong (page E-18). Check your Home City setting and correct it, if necessary.

■ The current time setting is off by one hour.

You may need to change your Home City's standard time/daylight saving time (DST) setting. Use the procedure under "Adjusting the Digital Time and Date Settings" (page E-21) to change the standard time/daylight saving time (DST) setting.

E-45

Main Indicators

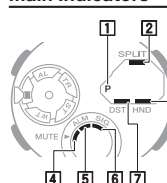

Number	Name	See
1	PM indicator	E-15
2	Split indicator	E-29
3	Hands shifted indicator	E-13
4	Mute indicator	E-43
5	Alarm on indicator	E-36
6	Hourly time signal on indicator	E-38
7	DST indicator	E-20, E-27

E-47

Stopwatch:

Measuring unit: 1/100 seconds (first hour);
1 second (after first hour)

Measuring capacity: 23:59'59"

Measuring modes: Elapsed time, split time, two finishes

Countdown Timer:

Measuring unit: 1 second

Countdown range: 24 hours

Countdown start time setting range: 1 second to 24 hours (1-second increments)

Alarms: 5 Daily alarms; Hourly time signal

Illumination: Double LED (light-emitting diode); Selectable illumination duration (approximately 1.5 seconds or 3 seconds)

Other: Button operation tone on/off; Moving the Hands to View the Digital Display

E-49

Battery

- Two silver oxide batteries (Type: SR726W)
Approximate battery operating time: 3 years under the following conditions:
- Alarm: 10 seconds/day
 - 1 illumination operation (1.5 seconds) per day

Frequent use of illumination runs down the battery.

Specifications are subject to change without notice.

E-50

Operating Precautions

Water Resistance

- The information below applies to watches with WATER RESIST or WATER RESISTANT marked on the back cover.

Marking	On watch front or on back cover	Water Resistance Under Daily Use	Enhanced Water Resistance Under Daily Use		
			5 Atmospheres	10 Atmospheres	20 Atmospheres
		No BAR mark	5BAR	10BAR	20BAR
	Hand washing, rain	Yes	Yes	Yes	Yes
Example of Daily Use	Water-related work, swimming	No	Yes	Yes	Yes
	Windsurfing	No	No	Yes	Yes
	Skin diving	No	No	Yes	Yes

- Do not use your watch for scuba diving or other types of diving that requires air tanks.

OPUM-E

E-51

- Watches that do not have WATER RESIST or WATER RESISTANT marked on the back cover are not protected against the effects of sweat. Avoid using such a watch under conditions where it will be exposed to large amounts of sweat or moisture, or to direct splashing with water.
- Even if a watch is water resistant, note the usage precautions described below. Such types of use reduce water resistance performance and can cause fogging of the glass.
 - Do not operate the crown or buttons while your watch is submersed in water or wet.
 - Avoid wearing your watch while in the bath.
 - Do not wear your watch while in a heated swimming pool, sauna, or any other high temperature/high humidity environment.
 - Do not wear your watch while washing your hands or face, while doing housework, or while performing any other task that involves soaps or detergents.
- After submersion in seawater, use plain water to rinse all salt and dirt from your watch.
- To maintain water resistance, have the gaskets of your watch replaced periodically (about once every two or three years).

E-52

- A trained technician will inspect your watch for proper water resistance whenever you have its battery replaced. Battery replacement requires the use of special tools. Always request battery replacement from your original retailer or from an authorized CASIO service center.
- Some water-resistant watches come with fashionable leather bands. Avoid swimming, washing, or any other activity that causes direct exposure of a leather band to water.
- The inside surface of the watch glass may fog when the watch is exposed to a sudden drop in temperature. No problem is indicated if the fogging clears up relatively quickly. Sudden and extreme temperature changes (such as coming into an air conditioned room in the summer and standing close to an air conditioner outlet, or leaving a heated room in the winter and allowing your watch to come into contact with snow) can cause it to take longer for glass fogging to clear up. If glass fogging does not clear up or if you notice moisture inside of the glass, immediately stop using your watch and take it to your original retailer or to an authorized CASIO service center.
- Your water-resistant watch has been tested in accordance with International Organization for Standardization regulations.

E-53

Band

- Tightening the band too tightly can cause you to sweat and make it difficult for air to pass under the band, which can lead to skin irritation. Do not fasten the band too tightly. There should be enough room between the band and your wrist so you can insert your finger.
- Deterioration, rust, and other conditions can cause the band to break or come off of your watch, which in turn can cause band pins to fly out of position or to fall out. This creates the risk of your watch falling from your wrist and becoming lost, and also creates the risk of personal injury. Always take good care of your band and keep it clean.
- Immediately stop using a band if you even notice any of the following: loss of band flexibility, band cracks, band discoloration, band looseness, band connecting pin flying or falling out, or any other abnormality. Take your watch to your original retailer or to a CASIO service center for inspection and repair (for which you will be charged) or to have the band replaced (for which you will be charged).

E-54

Temperature

- Never leave your watch on the dashboard of a car, near a heater, or in any other location that is subject to very high temperatures. Do not leave your watch where it will be exposed to very low temperatures. Temperature extremes can cause your watch to lose or gain time, to stop, or otherwise malfunction.
- Leaving your watch in an area hotter than +60°C (140°F) for long periods can lead to problems with its LCD. The LCD may become difficult to read at temperatures lower than 0°C (32°F) and greater than +40°C (104°F).

Impact

- Your watch is designed to withstand impact incurred during normal daily use and during light activity such as playing catch, tennis, etc. Dropping your watch or otherwise subjecting it to strong impact, however, can lead to malfunction. Note that watches with shock-resistant designs (G-SHOCK, BABY-G, G-MS) can be worn while operating a chain saw or engaging in other activities that generate strong vibration, or while engaging in strenuous sports activities (motocross, etc.)

E-55

Magnetism

- The hands of analog and combination (analog-digital) watches are moved by a motor that uses magnetic force. When such a watch is close to a device (audio speakers, magnetic necklace, cell phone, etc.) that emits strong magnetism, the magnetism can cause timekeeping to slow down, speed up, or stop, resulting in the incorrect time being displayed.
- Very strong magnetism (from medical equipment, etc.) should be avoided because it can cause malfunction of your watch and damage to electronic components.

Electrostatic Charge

- Exposure to very strong electrostatic charge can cause your watch to display the wrong time. Very strong electrostatic charge even can damage electronic components.
- Electrostatic charge can cause the display to go blank momentarily or cause a rainbow effect on the display.

E-56

Chemicals

- Do not allow your watch to come into contact with thinner, gasoline, solvents, oils, or fats, or with any cleaners, adhesives, paints, medicines, or cosmetics that contain such ingredients. Doing so can cause discoloration of or damage to the resin case, resin band, leather, and other parts.

Storage

- If you do not plan to use your watch for a long time, thoroughly wipe it free of all dirt, sweat, and moisture, and store it in a cool, dry place.

Resin Components

- Allowing your watch to remain in contact with other items or storing it together with other items for long periods while it is wet can cause color on resin components to transfer to the other items, or the color of the other items to transfer to the resin components of your watch. Be sure to dry off your watch thoroughly before storing it and make sure it is not in contact with other items.

E-57

- Leaving your watch where it is exposed to direct sunlight (ultraviolet rays) for long periods or failure to clean dirt from your watch for long periods can cause it to become discolored.
- Friction caused by certain conditions (strong external force, sustained rubbing, impact, etc.) can cause discoloration of painted components.
- If there are printed figures on the band, strong rubbing of the printed area can cause discoloration.
- Leaving your watch wet for long periods can cause fluorescent color to fade. Wipe the watch dry as soon as possible after it becomes wet.
- Semi-transparent resin parts can become discolored due to sweat and dirt, and if exposed to high temperatures and humidity for long periods.
- Daily use and long-term storage of your watch can lead to deterioration, breaking, or bending of resin components. The extent of such damage depends on usage conditions and storage conditions.

E-58

Leather Band

- Allowing your watch to remain in contact with other items or storing it together with other items for long periods while it is wet can cause the color of the leather band to transfer to the other items or the color of the other items to transfer to the leather band. Be sure to dry off your watch thoroughly with a soft cloth before storing it and make sure it is not in contact with other items.
- Leaving a leather band where it is exposed to direct sunlight (ultraviolet rays) for long periods or failure to clean dirt from a leather band for long periods can cause it to become discolored.

CAUTION: Exposing a leather band to rubbing or dirt can cause color transfer and discoloration.

Metal Components

- Failure to clean dirt from metal components can lead to formation of rust, even if components are stainless steel or plated. If metal components exposed to sweat or water, wipe thoroughly with a soft, absorbent cloth and then place the watch in a well-ventilated location to dry.

E-59

- Use a soft toothbrush or similar tool to scrub the metal with a weak solution of water and a mild neutral detergent, or with soapy water. Next, rinse with water to remove all remaining detergent and then wipe dry with a soft absorbent cloth. When washing metal components, wrap the watch case with kitchen plastic wrap so it does not come into contact with the detergent or soap.

Bacteria and Odor Resistant Band

- The bacteria and odor resistant band protects against odor generated by the formation of bacteria from sweat, which ensures comfort and hygiene. In order to ensure maximum bacteria and odor resistance, keep the band clean. Use an absorbent soft cloth to thoroughly wipe the band clean of dirt, sweat, and moisture. A bacteria and odor resistant band suppresses the formation of organisms and bacteria. It does not protect against rash due to allergic reaction, etc.

Liquid Crystal Display

- Display figures may be difficult to read when viewed from an angle.

E-60

E-61

User Maintenance

Caring for Your Watch

- Remember that you wear your watch next to your skin, just like a piece of clothing. To ensure your watch performs at the level for which it is designed, keep it clean by frequently wiping with a soft cloth to keep your watch and band free of dirt, sweat, water and other foreign matter.
- Whenever your watch is exposed to sea water or mud, rinse it off with clean fresh water.
 - For a metal band or a resin band with metal parts, use a soft toothbrush or similar tool to scrub the band with a weak solution of water and a mild neutral detergent, or with soapy water. Next, rinse with water to remove all remaining detergent and then wipe dry with a soft absorbent cloth. When washing the band, wrap the watch case with kitchen plastic wrap so it does not come into contact with the detergent or soap.

E-62

E-63

- Rust can cause sharp areas on metal components and can cause band pins to fly out of position or to fall out. If you ever notice any abnormality immediately stop using your watch and take it to your original retailer or to an authorized CASIO service center.
- Even if the surface of the metal appears clean, sweat and rust in crevasses can soil the sleeves of clothing, cause skin irritation, and even interfere with watch performance.

Premature Wear

- Leaving sweat or water on a resin band or bezel, or storing your watch an area subject to high moisture can lead to premature wear, cuts, and breaks.

Skin Irritation

- Individuals with sensitive skin or in poor physical condition may experience skin irritation when wearing a watch. Such individuals should keep their leather band or resin band particularly clean. Should you ever experience a rash or other skin irritation, immediately remove your watch and contact a skin care professional.

E-64

E-65

Low Battery Power

- Low battery power is indicated by large timekeeping error, by dim display contents, or by a blank display.
- Operation while battery power is low can result in malfunction. Replace the batteries as soon as possible.

Note that CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss suffered by you or any third party arising through the use of your watch or its malfunction.

- For a resin band, wash with water and then wipe dry with a soft cloth. Note that sometimes a smudge like pattern may appear on the surface of a resin band. This will not have any effect on your skin or clothing. Wipe with a cloth to remove the smudge pattern.
- Clean water and sweat from a leather band by wiping with a soft cloth.
- Not operating a watch crown, buttons, or rotary bezel could lead to later problems with their operation. Periodically rotate the crown and rotary bezel, and press buttons to maintain proper operation.

Dangers of Poor Watch Care

Rust

- Though the metal steel used for your watch is highly rust-resistant, rust can form if your watch is not cleaned after it becomes dirty.
 - Dirt on your watch can make it impossible for oxygen to come into contact with the metal, which can lead to breakdown of the oxidization layer on the metal surface and the formation of rust.

Battery Replacement

- Leave battery replacement up to your original retailer or authorized CASIO service center.
- Have the batteries replaced only with the type specified in the User's Guide. Use of a different battery type can cause malfunction.
- When replacing the batteries, also request a check for proper water resistance.
- Ornamental resin components may become worn, cracked, or bent over time when subjected to normal daily use. Note that if cracking or any other abnormality indicating possible damage is noticed in a watch submitted for battery replacement, your watch will be returned with an explanation of the abnormality, without the requested servicing being performed.

Initial Batteries

- The batteries that come loaded in your watch when you purchase it are used for function and performance testing at the factory.
- Test batteries may go dead quicker than the normally rated battery life as noted in the User's Guide. Note that you will be charged for replacement of these batteries, even if replacement is required within your watch's warranty period.

E-66

E-67

City Code Table

City Code Table

City Code	City	UTC Offset/ GMT Differential	City Code	City	UTC Offset/ GMT Differential
PPG	Pago Pago	-11	FEN	Fernando de Noronha	-2
HNL	Honolulu	-10	RAI	Praia	-1
ANC	Anchorage	-9	UTC		
YVR	Vancouver	-8	LIS	Lisbon	0
LAX	Los Angeles		LON	London	
YEA	Edmonton	-7	MAD	Madrid	
DEN	Denver		PAR	Paris	
MEX	Mexico City	-6	ROM	Rome	+1
CHI	Chicago		BER	Berlin	
NYC	New York	-5	STO	Stockholm	
YHZ	Halifax	-4	ATH	Athens	
YYT	St. John's	-3.5	CAI	Cairo	+2
BUE	Buenos Aires		JRS	Jerusalem	
RIO	Rio De Janeiro	-3			

L

L-1

Operation Guide 5590

CASIO®

City Code	City	UTC Offset/ GMT Differential
MOW	Moscow	+3
JED	Jeddah	
THR	Tehran	+3.5
DXB	Dubai	+4
KBL	Kabul	+4.5
KHI	Karachi	+5
DEL	Delhi	+5.5
KTM	Kathmandu	+5.75
DAC	Dhaka	+6
RGN	Yangon	+6.5
BKK	Bangkok	+7
SIN	Singapore	+8
HKG	Hong Kong	
BJS	Beijing	
TPE	Taipei	

City Code	City	UTC Offset/ GMT Differential
SEL	Seoul	+9
TYO	Tokyo	
ADL	Adelaide	+9.5
GUM	Guam	+10
SYD	Sydney	
NOU	Noumea	+11
WLG	Wellington	+12

- This table shows the city codes of this watch (As of July 2018).
- The rules governing global times (GMT differential and UTC offset) and summer time are determined by each individual country.

CASIO®

CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan

L-2