

# Operation Guide 2753 3333

## Getting Acquainted

Congratulations upon your selection of this CASIO watch. To get the most out of your purchase, be sure to carefully read this manual and keep it on hand for later reference when necessary.

**Expose the watch to bright light to charge its battery before using it.**  
 You can use this watch even as its battery is being charged by exposure to bright light.  
 • Be sure to read "Battery" of this manual for important information you need to know when exposing the watch to bright light.

### If the digital display of the watch is blank...




Power saving indicator

If the Power Saving indicator (☾) is flashing on the display, it means that the display is blank because the watch's Power Saving function has turned it off to conserve power. Power Saving automatically turns off the display and enters a sleep state whenever your watch is left for a certain period in an area where it is dark. If the watch is kept in the dark for a longer period, the analog hands will also stop moving after a few days.  
 • The initial factory default setting is Power Saving on.  
 • The watch will recover from the sleep state if you move it to a well-lit area, if you press any button, or if you angle the watch towards your face for reading.  
 • See "Power Saving Function" for more information.


## General Guide

- Press (C) to change from mode to mode.
- In any mode, press (L) to illuminate the display.

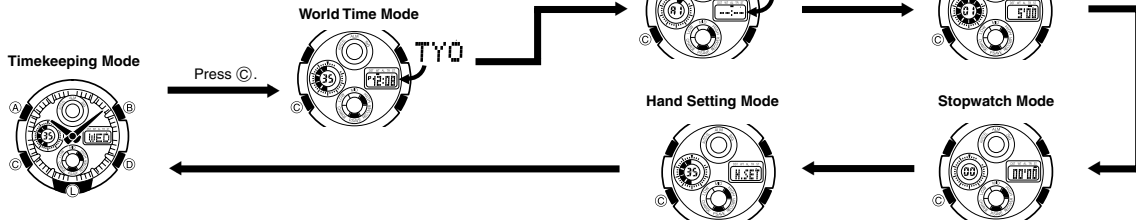

## Timekeeping

Use the Timekeeping Mode to set and view the current time and date.

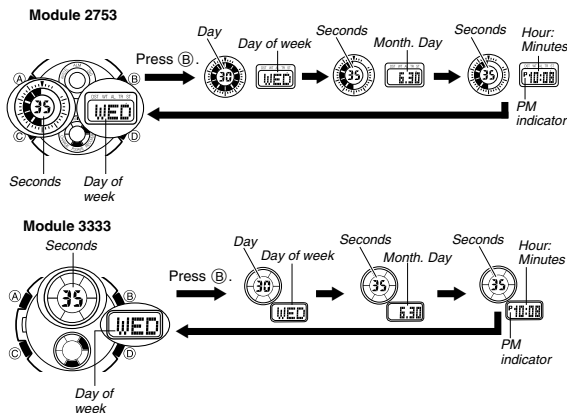


## Digital Time and Date

Make sure you select your Home City code before you change the current time and date settings. World Time Mode times are all displayed in accordance with the Timekeeping Mode settings. Because of this, World Time Mode times will not be correct if you do not select the proper Home City code before setting the time and date in the Timekeeping Mode.

### To set the digital time and date

1. In the Timekeeping Mode, hold down (A) until the city code starts to flash, which indicates the setting screen.
2. Press (C) to move the flashing in the sequence shown below to select other settings.

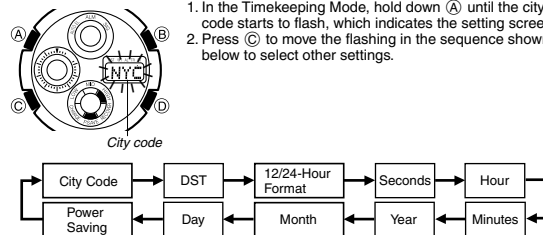

## About This Manual



(Light)

Module 2753




(Light)


Module 3333

- The operational procedures for Modules 2753 and 3333 are identical. All of the illustrations in this manual show Module 2753.
- Depending on the model of your watch, display text appears either as dark figures on a light background, or light figures on a dark background. All sample displays in this manual are shown using dark figures on a light background.
- Button operations are indicated using the letters shown in the illustration.
- Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "Reference" section.


## Alarm Mode




## Countdown Timer Mode

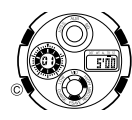

## Hand Setting Mode



## Stopwatch Mode



3. When the setting you want to change is flashing, use (B) and/or (D) to change it as described below.

| Screen: | To do this:  | Do this:                       |
|---------|--|--------------------------------|
|         | Change the city code   | Use (D) (east) and (B) (west). |
|         | Toggle between Daylight Saving Time (ON) and Standard Time (OFF) | Press (D).                     |
|         | Toggle between 12-hour (12H) and 24-hour (24H) timekeeping       | Press (D).                     |
|         | Reset the seconds to 00  | Press (D).                     |
|         | Change the hour or minutes                                       | Use (D) (+) and (B) (-).       |
|         | Change the year  | Use (D) (+) and (B) (-).       |
|         | Change the month or day  | Use (D) (+) and (B) (-).       |
|         | Toggle Power Saving on (ON) and off (OFF)                        | Press (D).                     |

- See "City Code Table" for a complete list of available city codes.
- See "Power Saving Function" for details about the Power Saving.
- 4. Press (A) to exit the setting screen.
- When you exit the setting screen, the analog hands are adjusted automatically to match the digital time. See "Analog Timekeeping" for more information.

## Daylight Saving Time (DST)

Daylight Saving Time (summer time) advances the time setting by one hour from Standard Time. Remember that not all countries or even local areas use Daylight Saving Time.

### To change the Daylight Saving Time (summer time) setting

1. In the Timekeeping Mode, hold down (A) until the city code starts to flash, which indicates the setting screen.
  2. Press (C) once and the DST setting screen appears.
  3. Use (D) to toggle Daylight Saving Time (ON) and Standard Time (OFF).
  4. Press (A) to exit the setting screen.
- The DST indicator (DST) appears on the display to indicate that Daylight Saving Time is turned on.

## Analog Timekeeping

The analog time of this watch is synchronized with the digital time. The analog time setting is adjusted automatically whenever you change the digital time.

### Note


- The hands for the analog timepiece move to adjust to a new setting whenever any of the following occurs.

*When you change the digital time setting*

*When you change the Home City code and/or DST setting*

- If the analog time does not match the digital time for any reason, use the procedure described under "To adjust the analog time" to match the analog setting to the digital setting.
- Whenever you need to adjust both the digital and the analog time settings, make sure you adjust the digital setting first.
- Depending on how much the hands have to move in order to adjust to the digital time, it may take some time before they stop moving.

### To adjust the analog time

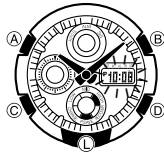


- In the Timekeeping Mode, press **C** five times to enter the Hand Setting Mode.
- Hold down **A** until the current digital time starts to flash, which indicates the setting screen.
- Use **D** and **B** to adjust the analog setting as described below.

| When you want to do this:                               | Perform this button operation:   |
|---|--|
| Move the hand setting forward 20 seconds                | <ul style="list-style-type: none"> <li>Press <b>D</b>.</li> </ul>  |
| Move the hand setting a short way forward at high speed | <ul style="list-style-type: none"> <li>Hold down <b>D</b>.</li> <li>Release <b>D</b> when the hands reach the setting you want.</li> </ul>   |
| Move the hand setting a long way forward at high speed  | <ul style="list-style-type: none"> <li>While holding down <b>D</b> to move the hands at high speed, press <b>B</b> to lock the high-speed hand movement.</li> <li>To stop the hand movement, press any button.</li> <li>Hand movement stops automatically if the hour hand makes one full (12-hour) revolution.</li> </ul> |

- Press **A** to exit the setting screen.
- The minute hand will be adjusted slightly to match the seconds when you exit the setting screen.
- To return to the Timekeeping Mode, press **C**.

### World Time

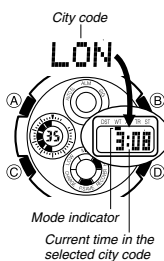

The World Time Mode digitally displays the current time in 30 cities (29 time zones) around the world.


- Pressing **A** in the World Time Mode causes the applicable city code to appear on the digital display for about one second.
- If the current time shown for a city is wrong, check your Home City time settings and make the necessary changes.
- All of the operations in this section are performed in the World Time Mode, which you enter by pressing **C**.

#### To view the time in another city

While in the World Time Mode, press **D** to scroll through the city codes (time zones) to the east or **B** to scroll to the west.

- For full information on city codes, see the "City Code Table".


#### To toggle a city code time between Standard Time and Daylight Saving Time

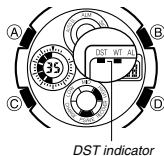

- In the World Time Mode, use **B** and **D** to display the city code (time zone) whose Standard Time/Daylight Saving Time setting you want to change.
  - Pressing **A** in the World Time Mode causes the applicable city code to appear on the digital display for about one second.
- Hold down **A** to toggle Daylight Saving Time (DST indicator displayed) and Standard Time (DST indicator not displayed).

- Note that you cannot use the World Time Mode to change the DST setting of the Home City code you currently have selected in the Timekeeping Mode. See "Daylight Saving Time (DST)" for information about turning the Home City code DST setting on and off.
- Note that you cannot switch between Standard Time and Daylight Saving Time while **12:1** is selected as the city code.
- The DST indicator will appear on the display whenever you display a city code for which Daylight Saving Time is turned on.
- Note that the DST/Standard Time setting affects only the currently displayed city code. Other city codes are not affected.

### Alarms

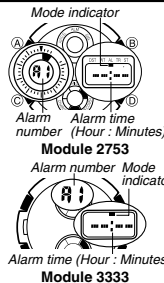


You can set five independent daily alarms. When an alarm is turned on, the alarm tone sounds when the alarm time is reached.

You can also turn on an Hourly Time Signal that causes the watch to beep twice every hour on the hour.


- The alarm number (**R 1** through **R 5**) indicates an alarm screen. **00** is shown for the alarm time when the Hourly Time Signal screen is on the display.
- All of the operations in this section are performed in the Alarm Mode, which you enter by pressing **C**.

Alarm time (Hour : Minutes)  
Module 3333

### To set an alarm time

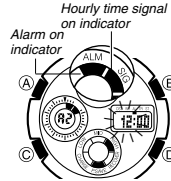

- In the Alarm Mode, use **D** to scroll through the alarm screens until the one whose time you want to set is displayed.



- Hold down **A** until the hour digits of the alarm time start to flash, which indicates the setting screen.
  - This automatically turns on the alarm.

- Press **C** to move the flashing between the hour and minute settings.
- While a setting is flashing, use **D** (+) and **B** (-) to change it.
  - When setting the alarm time using the 12-hour format, take care to set the time correctly as a.m. (no indicator) or p.m. (**P** indicator).
- Press **A** to exit the setting screen.

### Alarm Operation

The alarm sounds in all modes at the preset time for about 10 seconds, or until you stop it by pressing any button.


#### To test the alarm

In the Alarm Mode, hold down **B** to sound the alarm.

#### To turn an alarm and the Hourly Time Signal on and off

- In the Alarm Mode, use **D** to select an alarm or the Hourly Time Signal.
- When the alarm or the Hourly Time Signal you want to set is selected, press **B** to turn it on and off.
  - Indicates alarm is ON.
  - Indicates Hourly Time Signal is ON.
- The alarm on indicator () and the Hourly Time Signal on indicator () are shown on the display in all modes while these functions are turned on.
- If any alarm is on, the alarm on indicator is shown on the display in all modes.

### Countdown Timer

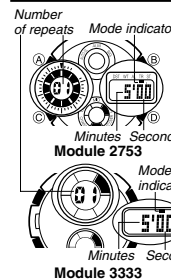


You can set the countdown timer within a range of one to 60 minutes. An alarm sounds when the countdown reaches zero.

- You can also select auto-repeat, which automatically restarts the countdown from the original value you set whenever zero is reached.
- All of the operations in this section are performed in the Countdown Timer Mode, which you enter by pressing **C**.

#### To set the countdown start time

- While the countdown start time is on the display in the Countdown Timer Mode, hold down **A** until the current countdown start time starts to flash, which indicates the setting screen.

- If the countdown start time is not displayed, use the procedure under "To use the countdown timer" to display it.
- Press **C** to move the flashing in the sequence shown below to select other settings.



- While a setting is flashing, use **D** (+) and **B** (-) to change it.
  - See "To turn auto-repeat on and off" below for details on the auto-repeat setting.
- Press **A** to exit the setting screen.

#### To use the countdown timer

- Press **D** while in the Countdown Timer Mode to start the countdown timer.
- When the end of the countdown is reached and auto-repeat is turned off, the alarm sounds for 10 seconds or until you stop it by pressing any button. The countdown time is automatically reset to its starting value after the alarm stops.
  - Press **D** while a countdown operation is in progress to pause it. Press **D** again to resume the countdown.
  - To completely stop a countdown operation, first pause it (by pressing **D**), and then press **B**. This returns the countdown time to its starting value.

#### To turn auto-repeat on and off

- While the countdown start time is on the display in the Countdown Timer Mode, hold down **A** until the current countdown start time starts to flash, which indicates the setting screen.
- Press **C** to move the flashing to the auto-repeat setting.
- Press **D** to turn auto-repeat on ( displayed) and off ( displayed).
- Press **A** to exit the setting screen.
  - When auto-repeat is turned on, the alarm sounds and countdown starts again whenever the countdown reaches zero. You can stop the countdown by pressing **D**, and manually reset to the countdown start time by pressing **B**.
  - Auto-repeat timing repeats up to nine times.

## Stopwatch


The stopwatch lets you measure elapsed time, split times, and two finishes.

- The display range of the stopwatch is 99 minutes, 59.99 seconds.
- The stopwatch continues to run, restarting from zero after it reaches its limit, until you stop it.
- Exiting the Stopwatch Mode while a split time is frozen on the display clears the split time and returns to elapsed time measurement.
- The stopwatch measurement operation continues even if you exit the Stopwatch Mode.


All of the operations in this section are performed in the Stopwatch Mode, which you enter by pressing C.

### To measure times with the stopwatch

#### Elapsed Time



#### Split Time



#### Two Finishes



## Illumination

The watch has an EL (electro-luminescent) panel that causes the entire display to glow for easy reading in the dark. The watch's auto light switch automatically illuminates the face when you angle the watch towards your face.

- The auto light switch must be turned on (indicated by the auto light switch indicator) for it to operate.
- See "Illumination Precautions" for other important information.

**To turn on illumination manually**  
In any mode, press L for about one second.

- The above operation turns on illumination regardless of the current auto light switch setting.

### About the Auto Light Switch

Turning on the auto light switch causes the display illumination to turn on for about one second, whenever you position your wrist as described below in any mode. Note that this watch features a "Full Auto EL Light," so the auto light switch operates only when available light is below a certain level. It does not illuminate the display under bright light.

Moving the watch to a position that is parallel to the ground and then tilting it towards you more than 40 degrees causes illumination to turn on.

- Wear the watch on the outside of your wrist.



### Warning!

- Always make sure you are in a safe place whenever you are reading the display of the watch using the auto light switch. Be especially careful when running or engaged in any other activity that can result in accident or injury. Also take care that sudden illumination by the auto light switch does not surprise or distract others around you.
- When you are wearing the watch, make sure that its auto light switch is turned off before riding on a bicycle, or operating a motorcycle or any other motor vehicle. Sudden and unintended operation of the auto light switch can create a distraction, which can result in a traffic accident and serious personal injury.

### To turn the auto light switch on and off


- In any mode, hold down L for about two seconds to toggle the auto light switch on (the auto light switch indicator displayed) and off (the auto light switch indicator not displayed).
- The auto light switch indicator is on the display in all modes while the auto light switch is turned on.

## Battery

This watch is equipped with a solar cell and a rechargeable battery (secondary battery) that is charged by the electrical power produced by the solar cell. The illustration shown below shows how you should position the watch for charging.

**Example:** Orient the watch so its face is pointing at a light source.

- The illustration shows how to position a watch with a resin band.
- Note that charging efficiency drops when any part of the solar cell is blocked by clothing, etc.
- Normally, you should try to keep the watch outside of your sleeve as much as possible. Charging is significantly reduced if the face is only partially covered.

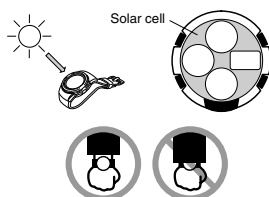

### Important!

- Storing the watch for long periods in an area where there is no light or wearing it in such a way that it is blocked from exposure to light can cause rechargeable battery power to run down. Make sure that the watch is normally exposed to bright light whenever possible.
- Normally, the rechargeable battery should not need replacement, but after very long use over a number of years, the rechargeable battery may lose its ability to achieve a full charge. Should you notice problems with getting the rechargeable battery to a full charge, contact your dealer or CASIO distributor about having it replaced.
- The rechargeable battery should be replaced with a CASIO-specified CTL1616 battery only. Other rechargeable batteries can cause damage to the watch.
- All data stored in memory is deleted, and the current time and all other settings return to their initial factory defaults whenever battery power drops to Level 4 and when you have the battery replaced.
- Turn on the watch's Power Saving function and keep it in an area normally exposed to bright light when storing it for long periods. This helps to keep the rechargeable battery from going dead.

### Battery Power Indicator and Recover Indicator

The battery power indicator on the display shows you the current status of the rechargeable battery's power.

| Level | Battery Power Indicator | Function Status  |
|-------|-------------------------|--|
| 1     |                         | All functions enabled.   |
| 2     |                         | All functions enabled.   |
| 3     |                         | Alarm, hourly time signal, illumination, auto light switch, and display are disabled. Though the hands of the watch do not move, time continues to be kept internally. |
| 4     |                         | All functions, including timekeeping, disabled.  |

(Charge Soon Alert)

- The flashing charge indicator (CHARGE) at Level 3 tells you that battery power is very low, and that exposure to bright light for charging is required as soon as possible.
- At Level 4, all functions are disabled and settings return to their initial factory defaults. Functions are enabled once again after the rechargeable battery is charged, but you need to set the time and date, after the battery reaches Level 3 (indicated by flashing charge indicator) from Level 4. You will not be able to set any of the other settings until the battery reaches Level 2 (no charge indicator) after dropping to Level 4.
- Leaving the watch in direct sunlight or some other very strong light source can cause the battery power indicator to temporarily show a reading that is higher than the actual battery level. The correct battery power indicator should appear after a few minutes.
- If you use the light or alarms a number of times during a short period, the recover indicator appears on the display and the following operations become disabled until battery power recovers.

### Illumination Beeper tone

#### Coordination between digital and analog timekeeping

After some time, battery and the recover indicator will disappear, indicating that the above functions are enabled again.

### Charging Precautions

Certain charging conditions can cause the watch to become very hot. Avoid leaving the watch in the areas described below whenever charging its rechargeable battery. Also note that allowing the watch to become very hot can cause its liquid crystal display to black out. The appearance of the LCD should become normal again when the watch returns to a lower temperature.

### Warning!

Leaving the watch in bright light to charge its rechargeable battery can cause it to become quite hot. Take care when handling the watch to avoid burn injury. The watch can become particularly hot when exposed to the following conditions for long periods.

- On the dashboard of a car parked in direct sunlight
- Too close to an incandescent lamp
- Under direct sunlight

### Charging Guide

After a full charge, timekeeping remains enabled for up to about 11 months.

- The following table shows the amount of time the watch needs to be exposed to light each day in order to generate enough power for normal daily operations.

| Exposure Level (Brightness)                           | Approximate Exposure Time |
|---|---------------------------|
| Outdoor Sunlight (50,000 lux)                         | 6 minutes                 |
| Sunlight Through a Window (10,000 lux)                | 30 minutes                |
| Daylight Through a Window on a Cloudy Day (5,000 lux) | 48 minutes                |
| Indoor Fluorescent Lighting (500 lux)                 | 8 hours                   |

- Since these are the specs, we can include all the technical details.
  - Display on 18 hours per day, sleep state 6 hours per day
  - 1 illumination operation (1.5 seconds) per day
  - 10 seconds of alarm operation per day
- Stable operation is promoted by frequent charging.

### Recovery Times

The table below shows the amount exposure that is required to take the battery from one level to the next.

| Exposure Level (Brightness)                           | Approximate Exposure Time |           |          |         |
|---|---------------------------|-----------|----------|---------|
|   | Level 4                   | Level 3   | Level 2  | Level 1 |
| Outdoor Sunlight (50,000 lux)                         | 2 hours                   | 38 hours  | 11 hours |         |
| Sunlight Through a Window (10,000 lux)                | 8 hours                   | 192 hours | 53 hours |         |
| Daylight Through a Window on a Cloudy Day (5,000 lux) | 13 hours                  | ---       | ---      |         |
| Indoor Fluorescent Lighting (500 lux)                 | 157 hours                 | ---       | ---      |         |

- The above exposure time values are all for reference only. Actual required exposure times depend on lighting conditions.

## Reference

This section contains more detailed and technical information about watch operation. It also contains important precautions and notes about the various features and functions of this watch.

### Power Saving Function



Power saving indicator

When turned on, the Power Saving function automatically enters a sleep state whenever the watch is left in an area where lighting is dim (less than about 30 Lux). The following shows how watch functions are affected when left in a dark place while in the sleep state.

| Elapsed Time in Dark | Functions  |
|----------------------|--|
| 60 to 70 minutes     | <ul style="list-style-type: none"> <li>• LCD off</li> <li>• Alarm, hourly time signal and analog timekeeping enabled</li> </ul>                        |
| 6 or 7 days          | <ul style="list-style-type: none"> <li>• LCD off, alarm and hourly time signal disabled</li> <li>• Analog timekeeping stopped at 12 o'clock</li> </ul> |


- Wearing the watch inside the sleeve of clothing can cause it to enter the sleep state.
- The watch will not enter the sleep state between 6:00 AM and 10:59 PM. If the watch is already in the sleep state when 6:00 AM arrives, however, it will remain in the sleep state.

### To recover from the sleep state

Perform any one of the following operations.

- Move the watch to a well-lit area.
- Press any button.
- Angle the watch towards your face for reading.

### To turn Power Saving on and off

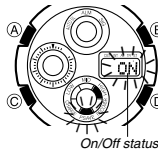

On/Off status

1. In the Timekeeping Mode, hold down (A) until the city code starts to flash, which indicates the setting screen.
  2. Press (C) nine times until the Power Saving on/off screen appears.
  3. Press (D) to toggle Power Saving on (ON) and off (OFF).
  4. Press (A) to exit the setting screen.
- The Power Saving indicator (☰) is on the display in all modes while the Power Saving is turned on.

### Auto Return Features

- If you leave the watch in the Alarm or Hand Setting Mode for two or three minutes without performing any operation, it automatically returns to the Timekeeping Mode.
- If you leave the watch with a flashing setting on the display for two or three minutes without performing any operation, the watch automatically exits the setting screen.

### Scrolling

The (B) and (D) buttons are used in various modes and setting screens to scroll through data on the display. In most cases, holding down these buttons during a scroll operation scrolls through the data at high speed.

### Initial Screens

When you enter the World Time or Alarm Mode, the data you were viewing when you last exited the mode appears first.

### Timekeeping

- Resetting the seconds to 00 while the current count is in the range of 30 to 59 causes the minutes to be increased by 1. In the range of 00 to 29, the seconds are reset to 00 without changing the minutes.
- The day of the week is automatically displayed in accordance with the date (year, month, and day) settings.
- The year can be set in the range of 2000 to 2099.
- The watch's built-in full automatic calendar makes allowances for different month lengths and leap years. Once you set the date, there should be no reason to change it except after you have the watch's battery replaced or when battery power drops to Level 4.
- The current time for all city codes in the Timekeeping Mode and World Time Mode is calculated in accordance with the Greenwich Mean Time (GMT) differential for each city, based on your Home City time setting.
- GMT differential is calculated by this watch based on Universal Time Coordinated (UTC\*) data.

\* UTC is the world-wide scientific standard of timekeeping. It is based upon carefully maintained atomic (cesium) clocks that keep time accurately to within microseconds. Leap seconds are added or subtracted as necessary to keep UTC in sync with the Earth's rotation. The reference point for UTC is Greenwich, England.

### 12-hour/24-hour Timekeeping Formats

The 12-hour/24-hour timekeeping format you select in the Timekeeping Mode is also applied in all other modes.

- With the 12-hour format, the P (PM) indicator appears on the display for times in the range of noon to 11:59 p.m. and no indicator appears for times in the range of midnight to 11:59 a.m.
- With the 24-hour format, times are displayed in the range of 0:00 to 23:59, without any indicator.

### Illumination Precautions

- The electro-luminescent panel that provides illumination loses power after very long use.
- The illumination provided by the backlight may be hard to see when viewed under direct sunlight.
- Illumination automatically turns off whenever an alarm sounds.
- The watch may emit an audible sound whenever the display is illuminated. This is due to vibration of the EL panel used for illumination, and does not indicate malfunction.
- Frequent use of illumination runs down the battery.

### Auto light switch precautions

- Wearing the watch on the inside of your wrist, movement of your arm, or vibration of your arm can cause frequent activation of the auto light switch and illumination of the display. To avoid running down the battery, turn off the auto light switch whenever engaging in activities that might cause frequent illumination of the display.
- Note that wearing the watch under your sleeve while the auto light switch is turned on can cause frequent illumination of the display and can run down the battery.

More than 15 degrees too high



- Illumination may not turn on if the face of the watch is more than 15 degrees above or below parallel. Make sure that the back of your hand is parallel to the ground.
- Illumination turns off in about one second, even if you keep the watch pointed towards your face.
- Static electricity or magnetic force can interfere with proper operation of the auto light switch. If illumination does not turn on, try moving the watch back to the starting position (parallel with the ground) and then tilt it back towards you again. If this does not work, drop your arm all the way down so it hangs at your side, and then bring it back up again.

- Under certain conditions, illumination may not turn on until about one second after you turn the face of the watch towards you. This does not necessarily indicate malfunction of the auto light switch.
- You may notice a very faint clicking sound coming from the watch when it is shaken back and forth. This sound is caused by mechanical operation of the auto light switch, and does not indicate a problem with the watch.

### City Code Table

| City Code | City           | GMT Differential | Other major cities in same time zone                                 |
|-----------|----------------|------------------|--|
|           |                | -11.0            | Pago Pago  |
| HNL       | Honolulu       | -10.0            | Papeete  |
| ANC       | Anchorage      | -09.0            | Nome   |
| LAX       | Los Angeles    | -08.0            | San Francisco, Las Vegas, Vancouver, Seattle/Tacoma, Dawson City     |
| DEN       | Denver         | -07.0            | El Paso, Edmonton  |
| CHI       | Chicago        | -06.0            | Houston, Dallas/Ft. Worth, New Orleans, Mexico City, Winnipeg        |
| NYC       | New York       | -05.0            | Montreal, Detroit, Miami, Boston, Panama City, Havana, Lima, Bogota  |
| CCS       | Caracas        | -04.0            | La Paz, Santiago, Pt. Of Spain                                       |
| RIO       | Rio De Janeiro | -03.0            | Sao Paulo, Buenos Aires, Brasilia, Montevideo                        |
| ---       | ---            | -02.0            |  |
| ---       | ---            | -01.0            | Praia  |
| GMT       |                | +00.0            | Dublin, Lisbon, Casablanca, Dakar, Abidjan                           |
| LON       | London         |                  |  |
| PAR       | Paris          | +01.0            | Milan, Rome, Madrid, Amsterdam, Algiers, Hamburg, Frankfurt, Berlin  |
| BER       | Berlin         |                  | Frankfurt, Vienna, Stockholm   |
| ATH       | Athens         |                  | Helsinki, Istanbul, Beirut, Damascus, Cape Town                      |
| CAI       | Cairo          | +02.0            |  |
| JRS       | Jerusalem      |                  |  |
| JED       | Jeddah         | +03.0            | Kuwait, Riyadh, Aden, Addis Ababa, Nairobi, Moscow                   |
| THR       | Tehran         | +03.5            | Shiraz   |
| DXB       | Dubai          | +04.0            | Abu Dhabi, Muscat  |
| KBL       | Kabul          | +04.5            |  |
| KHI       | Karachi        | +05.0            | Male   |
| DEL       | Delhi          | +05.5            | Mumbai, Kolkata  |
| DAC       | Dhaka          | +06.0            | Colombo  |
| RGN       | Yangon         | +06.5            |  |
| BKK       | Bangkok        | +07.0            | Jakarta, Phnom Penh, Hanoi, Vientiane                                |
| HKG       | Hong Kong      | +08.0            | Singapore, Kuala Lumpur, Beijing, Taipei, Manila, Perth, Ulaanbaatar |
| SEL       | Seoul          |                  | Pyongyang  |
| TYO       | Tokyo          | +09.0            |  |
| ADL       | Adelaide       | +09.5            | Darwin   |
| SYD       | Sydney         | +10.0            | Melbourne, Guam, Rabaul  |
| NOU       | Noumea         | +11.0            | Pt. Vila   |
| WLG       | Wellington     | +12.0            | Christchurch, Nadi, Nauru Is.  |

• Based on data as of June 2003.