


Operation Guide 2910

Getting Acquainted

Congratulations upon your selection of this CASIO watch. To get the most out of your purchase, be sure to read this manual carefully and keep it on hand for later reference when necessary.

Keep the watch exposed to bright light

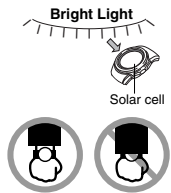


The electricity generated by the solar cell of the watch is stored by a built-in battery. Leaving or using the watch where it is not exposed to light causes the battery to run down. Make sure the watch is exposed to light as much as possible.


- When you are not wearing the watch on your wrist, position the face so it is pointed at a source of bright light.
- You should try to keep the watch outside of your sleeve as much as possible. Charging is significantly reduced if the face is only partially covered.

- The watch continues to operate, even when it is not exposed to light. Leaving the watch in the dark can cause the battery to run down, which will cause some watch functions to be disabled. If the battery goes dead, you will have to re-configure watch settings after recharging. To ensure normal watch operation, be sure to keep it exposed to light as much as possible.

Battery charges in the light.

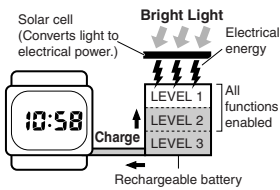

Battery discharges in the dark.

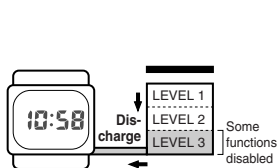

General Guide

- Press **C** to change from mode to mode.
- In any mode, press **L** to illuminate the display.

Timekeeping Mode



World Time Mode



Alarm Mode



Stopwatch Mode



Countdown Timer Mode




Press **C**.

Timekeeping

Use the Timekeeping Mode to set and view the current time and date.

- When setting the time, you can also configure settings for the illumination duration, the 12/24-hour format, and power saving on/off.
- In the Timekeeping Mode, you can press **B** to change the display format as shown below.


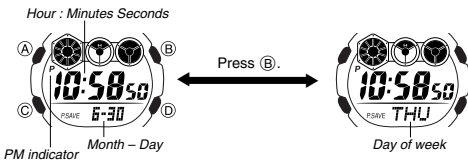


Setting the Time and Date

Make sure you select your Home City code before you change the current time and date settings. World Time Mode times are all displayed in accordance with the Timekeeping Mode settings. Because of this, World Time Mode times will not be correct if you do not select the proper Home City code before setting the time and date in the Timekeeping Mode.

To set the time and date

1. In the Timekeeping Mode, hold down **A** until the city code starts to flash, which indicates the setting screen.
2. Press **C** to change the flashing contents in the sequence shown below to select other settings.

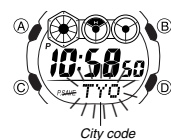

- The actual level at which some functions are disabled depends on the watch model.
- Frequent display illumination can quickly run down the battery and require charging. The following guidelines give an idea of the charging time required to recover from a single illumination operation.

Approximately 5 minutes exposure to bright sunlight coming in through a window
Approximately 50 minutes exposure to indoor fluorescent lighting

- Be sure to read "Power Supply" for important information you need to know when exposing the watch to bright light.

If the display of the watch is blank...

If the display of the watch is blank, it means that the watch's Power Saving function has turned off the display to conserve power.

- See "Power Saving Function" for more information.

About This Manual



(Light)



(Light)

- Depending on the model of your watch, display text appears either as dark figures on a light background, or light figures on a dark background. All sample displays in this manual are shown using dark figures on a light background.
- Button operations are indicated using the letters shown in the illustration.
- Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "Reference" section.

3. When the setting you want to change is flashing, use **B** and/or **D** to change it as described below.

Screen:	To do this:	Do this:
TYO	Change the city code	Use D (east) and B (west).
00 DST	Toggle between Daylight Saving Time (00) and Standard Time (GF)	Press D .
12H	Toggle between 12-hour (12H) and 24-hour (24H) timekeeping	Press D .
50	Reset the seconds to 00	Press D .
◆	Toggle the illumination duration setting between 1.5 seconds (♦) and 2.5 seconds (◆)	Press B .
10:58	Change the hour, minutes, or year	Use D (+) and B (-).
6-30	Change the month or day	
00 PS	Toggle Power Saving on (00) and off (PS)	Press D .

- See "City Code Table" for a complete list of available city codes.
- For information about settings other than the time and date, see the following.
Illumination duration: Illumination
Power Saving: Power Saving Function

4. Press **A** to exit the setting screen.

Daylight Saving Time (DST)

Daylight Saving Time (summer time) advances the time setting by one hour from Standard Time. Remember that not all countries or even local areas use Daylight Saving Time.

To change the Daylight Saving Time (summer time) setting

1. In the Timekeeping Mode, hold down **A** until the city code starts to flash, which indicates the setting screen.
 2. Press **C** once to display the DST setting screen.
 3. Use **D** to toggle Daylight Saving Time (00) and Standard Time (GF).
 4. Press **A** to exit the setting screen.
- The DST indicator appears to indicate that Daylight Saving Time is turned on.

World Time




City code

To view the time in another city

While in the World Time Mode, press **(D)** to scroll through the city codes (time zones) to the east or **(B)** to scroll to the west.

- For full information on city codes, see the "City Code Table".

To toggle a city code time between Standard Time and Daylight Saving Time

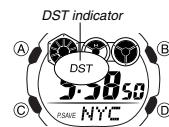

DST indicator

To toggle a city code time between Standard Time and Daylight Saving Time

1. In the World Time Mode, use **(B)** and **(D)** to display the city code (time zone) whose Standard Time/Daylight Saving Time setting you want to change.
2. Hold down **(A)** to toggle Daylight Saving Time (DST indicator displayed) and Standard Time (DST indicator not displayed).
- Note that you cannot switch between Standard Time and Daylight Saving Time while GMT is selected as the city code.
- The DST indicator will appear whenever you display a city code for which Daylight Saving Time is turned on.
- Note that the DST/Standard Time setting affects only the currently displayed city code. Other city codes are not affected.

Alarms



Alarm number

To set an alarm time



Alarm number

The Alarm Mode gives you a choice of four one-time alarms and one snooze alarm. Also use the Alarm Mode to turn the Hourly Time Signal (**ΣIG**) on and off.

- There are five alarms numbered AL1 through AL4, and SNZ. You can configure SNZ as a snooze alarm only. Alarms AL1 through AL4 can be used as one-time alarms only.
 - All of the operations in this section are performed in the Alarm Mode, which you enter by pressing **(C)**.
1. In the Alarm Mode, use **(D)** to scroll through the alarm screens until the one whose time you want to set is displayed.



2. After you select an alarm, hold down **(A)** until the hour setting of the alarm time starts to flash, which indicates the setting screen.
 - This operation automatically turns on the alarm.
3. Use **(C)** to move the flashing between the hour and minute settings.

4. While a setting is flashing, use **(D)** (+) and **(B)** (-) to change it.
5. Press **(A)** to exit the setting screen.
- When setting the alarm time using the 12-hour format, take care to set the time correctly as a.m. (no indicator) or p.m. (P indicator).

Alarm Operation

The alarm tone sounds at the preset time for 10 seconds, regardless of the mode the watch is in. In the case of the snooze alarm, the alarm operation is performed a total of seven times, every five minutes, or until you turn the alarm off.


- Pressing any button stops the alarm tone operation.
- Performing any one of the following operations during a 5-minute interval between snooze alarms cancels the current snooze alarm operation.

Displaying the Timekeeping Mode setting screen
Displaying the snooze alarm setting screen

To test the alarm


In the Alarm Mode, hold down **(D)** to sound the alarm.

To turn an alarm on and off

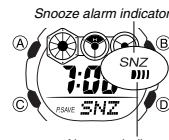

Alarm on indicator

To turn the Hourly Time Signal on and off

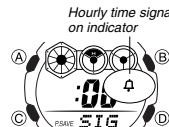


Hourly time signal on indicator

1. In the Alarm Mode, use **(D)** to select an alarm.
2. Press **(B)** to toggle it on and off.
- Turning on a one-time alarm (AL1, AL2, AL3, AL4) displays the alarm on indicator on its Alarm Mode screen. Turning on the snooze alarm (SNZ) displays the alarm on indicator and snooze alarm indicator on its Alarm Mode screen.
- In all modes, the alarm on indicator is shown for any alarm that is currently turned on. When the snooze alarm is on, the snooze alarm indicator is displayed in all modes.
- The alarm on indicator flashes while the alarm is sounding.
- The snooze alarm indicator flashes during the 5-minute intervals between alarms.

1. In the Alarm Mode, use **(D)** to select the Hourly Time Signal (**ΣIG**).
2. Press **(B)** to toggle it on (Hourly Time Signal on indicator displayed) and off (Hourly Time Signal on indicator not displayed).
- The Hourly Time Signal on indicator is displayed in all modes when the Hourly Time Signal is turned on.

Countdown Timer

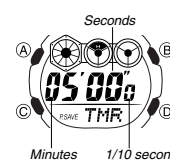

Minutes 1/10 second

You can set the countdown timer within a range of one to 60 minutes. An alarm sounds when the countdown reaches zero.

- All of the operations in this section are performed in the Countdown Timer Mode, which you enter by pressing **(C)**.


To set the countdown start time

1. While the countdown start time is on the display in the Countdown Timer Mode, hold down **(A)** until the current countdown start time starts to flash, which indicates the setting screen.
 - If the countdown start time is not displayed, use the procedure under "To use the countdown timer" to display it.
2. While a setting is flashing, use **(D)** (+) and **(B)** (-) to change it.
3. Press **(A)** to exit the setting screen.

To use the countdown timer

- Press **(D)** while in the Countdown Timer Mode to start the countdown timer.
- When the end of the countdown is reached, the alarm sounds for 10 seconds or until you stop it by pressing any button. The countdown time is automatically reset to its starting value after the alarm stops.
 - Press **(D)** while a countdown operation is in progress to pause it. Press **(D)** again to resume the countdown.
 - To completely stop a countdown operation, first pause it (by pressing **(D)**), and then press **(B)**. This returns the countdown time to its starting value.

Stopwatch

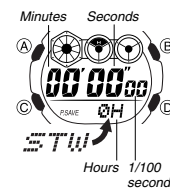


Hours 1/100 second

The stopwatch lets you measure elapsed time, split times, and two finishes.

- The display range of the stopwatch is 23 hours, 59 minutes, 59.99 seconds.
- The stopwatch continues to run, restarting from zero after it reaches its limit, until you stop it.
- Exiting the Stopwatch Mode while a split time is frozen on the display clears the split time and returns to elapsed time measurement.
- The stopwatch measurement operation continues even if you exit the Stopwatch Mode.
- All of the operations in this section are performed in the Stopwatch Mode, which you enter by pressing **(C)**.

To measure times with the stopwatch


Elapsed Time



Split Time



Two Finishes



Illumination



Auto light switch indicator

The watch has an EL (electro-luminescent) panel that causes the entire display to glow for easy reading in the dark. The watch's auto light switch automatically illuminates the display when you angle the watch towards your face.


- The auto light switch must be turned on (indicated by the auto light switch indicator) for it to operate.
- See "Illumination Precautions" for other important information.

To turn on illumination manually

- In any mode, press **(L)** to illuminate the display.
- You can specify 1.5 seconds or 2.5 seconds as the illumination duration. See "To set the time and date" for more information.
 - The above operation turns on illumination regardless of the current auto light switch setting.

About the Auto Light Switch

Turning on the auto light switch causes illumination to turn on whenever you position your wrist as described below in any mode. Note that this watch features a "Full Auto EL Light," so the auto light switch operates only when available light is below a certain level. It does not illuminate the display under bright light.

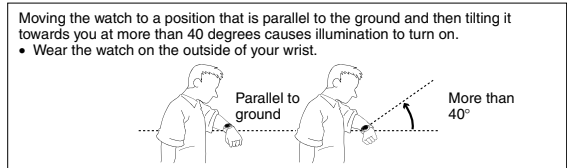

Warning!

- Always make sure you are in a safe place whenever you are reading the watch using the auto light switch. Be especially careful when running or engaged in any other activity that can result in accident or injury. Also take care that sudden illumination by the auto light switch does not startle or distract others around you.
- When you are wearing the watch, make sure that its auto light switch is turned off before riding on a bicycle, or operating a motorcycle or any other motor vehicle. Sudden and unintended operation of the auto light switch can create a distraction, which can result in a traffic accident and serious personal injury.

To turn the auto light switch on and off


- In any mode, hold down (D) for about two seconds to toggle the auto light switch on (auto light switch indicator displayed) and off (auto light switch indicator not displayed).
- The auto light switch indicator remains in all modes while the auto light switch is turned on.

Power Supply

This watch is equipped with a solar cell and a special rechargeable battery (secondary battery) that is charged by the electrical power produced by the solar cell. The illustration shown below shows how you should position the watch for charging.

Example: Orient the watch so its face is pointing at a light source.

- The illustration shows how to position a watch with a resin band.
- Note that charging efficiency drops when any part of the solar cell is blocked by clothing, etc.
- You should try to keep the watch outside of your sleeve as much as possible. Charging is significantly reduced if the face is only partially covered.

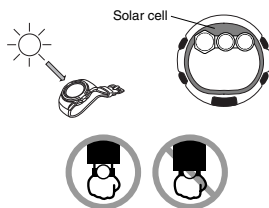

Important!

- Storing the watch for long periods in an area where there is no light or wearing it in such a way that it is blocked from exposure to light can cause rechargeable battery power to run down. Make sure that the watch is normally exposed to bright light whenever possible.
- This watch uses a special rechargeable battery to store power produced by the solar cell, so regular battery replacement is not required. However, after very long use, the rechargeable battery may lose its ability to achieve a full charge. If you experience problems getting the special rechargeable battery to fully charge, contact your dealer or CASIO distributor about having it replaced.
- Never try to remove or replace the watch's special battery yourself. Use of the wrong type of battery can damage the watch.
- The current time and all other settings return to their initial factory defaults whenever battery power drops to Level 4 and when you have the battery replaced.
- Turn on the watch's Power Saving function and keep it in an area normally exposed to bright light when storing it for long periods. This helps to keep the rechargeable battery from going dead.

Battery Power Indicator and Recover Indicator

The battery power indicator shows you the current power level of the rechargeable battery.



Level	Battery Power Indicator	Function Status
1		All functions enabled.
2		All functions enabled.
3	 (Charge Soon Alert)	Alarm, hourly time signal, illumination, auto light switch, and display disabled.
4		All functions, including timekeeping, disabled and initialized.

- The flashing charge indicator (CHG) at Level 3 tells you that battery power is very low, and that exposure to bright light for charging is required as soon as possible.
- At Level 4, all functions are disabled and settings return to their initial factory defaults. Functions are enabled once again after the rechargeable battery is charged, but you need to set the time and date, after the battery reaches Level 3 (indicated by the flashing charge indicator) from Level 4. You will not be able to configure any of the other settings until the battery reaches Level 2 (no charge indicator) after dropping to Level 4.
- Leaving the watch in direct sunlight or some other very strong light source can cause the battery power indicator to momentarily show a reading that is higher than the actual battery level. The correct battery power indicator should appear after a few minutes.
- If you use the light or alarms a number of times during a short period, the recover indicator (RECOV) appears and the following operations become disabled until battery power recovers.

*Illumination
Beeper tone*

After some time, battery power will recover and the recover indicator will disappear, indicating that the above functions are enabled again.

Charging Precautions

Certain charging conditions can cause the watch to become very hot. Avoid leaving the watch in the areas described below whenever charging its rechargeable battery. Also note that allowing the watch to become very hot can cause its liquid crystal display to black out. The appearance of the LCD should become normal again when the watch returns to a lower temperature.

Warning!

Leaving the watch in bright light to charge its rechargeable battery can cause it to become quite hot. Take care when handling the watch to avoid burn injury. The watch can become particularly hot when exposed to the following conditions for long periods.

- On the dashboard of a car parked in direct sunlight
- Too close to an incandescent lamp
- Under direct sunlight

Charging Guide

After a full charge, timekeeping remains enabled for up to about 11 months.

- The following table shows the amount of time the watch needs to be exposed to light each day in order to generate enough power for normal daily operations.

Exposure Level (Brightness)	Approximate Exposure Time
Outdoor Sunlight (50,000 lux)	4 minutes
Sunlight Through a Window (10,000 lux)	19 minutes
Daylight Through a Window on a Cloudy Day (5,000 lux)	29 minutes
Indoor Fluorescent Lighting (500 lux)	5 hours

- Since these are the specs, we can include all the technical details.
 - Display on 18 hours per day, sleep state 6 hours per day
 - 1 illumination operation (1.5 seconds) per day
 - 10 seconds of alarm operation per day
- Stable operation is promoted by frequent charging.

Recovery Times

The table below shows the amount exposure that is required to take the battery from one level to the next.

Exposure Level (Brightness)	Approximate Exposure Time			
	Level 4	Level 3	Level 2	Level 1
Outdoor Sunlight (50,000 lux)		2 hours	22 hours	6 hours
Sunlight Through a Window (10,000 lux)	5 hours		109 hours	30 hours
Daylight Through a Window on a Cloudy Day (5,000 lux)	9 hours		220 hours	61 hours
Indoor Fluorescent Lighting (500 lux)	101 hours		-- --	


- The above exposure time values are all for reference only. Actual required exposure times depend on lighting conditions.

Reference

This section contains more detailed and technical information about watch operation. It also contains important precautions and notes about the various features and functions of this watch.

Power Saving Function

When turned on, the Power Saving function automatically enters a sleep state whenever the watch is left in an area where it is dark for a certain period. The table below shows how watch functions are affected by the Power Saving function.

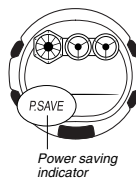

Elapsed Time in Dark	Display	Operation
60 to 70 minutes	Blank, with Sleep indicator (P.SAVE) flashing	All functions enabled, except for the display
6 or 7 days	Blank, with Sleep indicator (P.SAVE) not flashing	Beeper tone, backlight, and display are disabled.

- Wearing the watch inside the sleeve of clothing can cause it to enter the sleep state.
- The watch will not enter the sleep state between 6:00 AM and 10:59 PM. If the watch is already in the sleep state when 6:00 AM arrives, however, it will remain in the sleep state.

To recover from the sleep state

Perform any one of the following operations.

- Move the watch to a well-lit area.
- Press any button.
- Angle the watch towards your face for reading.

To turn Power Saving on and off

1. In the Timekeeping Mode, hold down (A) until the city code starts to flash, which indicates the setting screen.
 2. Press (C) nine times until the Power Saving on/off screen appears.
 3. Press (D) to toggle Power Saving on (PS) and off (PF).
 4. Press (A) to exit the setting screen.
- The Power Saving indicator (P.SAVE) is on the display in all modes while Power Saving is turned on.

Auto Return Features

- If you leave the watch in the Alarm Mode for two or three minutes without performing any operation, it automatically returns to the Timekeeping Mode.
- If you leave the watch with a flashing setting on the display for two or three minutes without performing any operation, the watch automatically exits the setting screen.

Scrolling

The (B) and (D) buttons are used in various modes and setting screens to scroll through data. In most cases, holding down these buttons during a scroll operation scrolls through the data at high speed.

Initial Screens

When you enter the World Time or Alarm Mode, the data you were viewing when you last exited the mode appears first.

Timekeeping

- Resetting the seconds to **00** while the current count is in the range of 30 to 59 causes the minutes to be increased by 1. In the range of 00 to 29, the seconds are reset to **00** without changing the minutes.
 - The day of the week is automatically displayed in accordance with the date (year, month, and day) settings.
 - The year can be set in the range of 2000 to 2099.
 - The watch's built-in full automatic calendar makes allowances for different month lengths and leap years. Once you set the date, there should be no reason to change it except after you have the watch's battery replaced or when battery power drops to Level 4.
 - The current time for all city codes in the Timekeeping Mode and World Time Mode is calculated in accordance with the Greenwich Mean Time (GMT) differential for each city, based on your Home City time setting.
 - GMT differential is calculated by this watch based on Universal Time Coordinated (UTC*) data.
- * UTC is the world-wide scientific standard of timekeeping. It is based upon carefully maintained atomic (cesium) clocks that keep time accurately to within microseconds. Leap seconds are added or subtracted as necessary to keep UTC in sync with the Earth's rotation. The reference point for UTC is Greenwich, England.

12-hour/24-hour Timekeeping Formats

- The 12-hour/24-hour timekeeping format you select in the Timekeeping Mode is also applied in all other modes.
- With the 12-hour format, the PM indicator (**P**) appears on the display for times in the range of noon to 11:59 p.m. and no indicator appears for times in the range of midnight to 11:59 a.m.
 - With the 24-hour format, times are displayed in the range of 0:00 to 23:59, without any indicator.

Illumination Precautions

- The electro-luminescent panel that provides illumination loses power after very long use.
- Illumination may be hard to see when viewed under direct sunlight.
- The watch may emit an audible sound whenever the display is illuminated. This is due to vibration of the EL panel used for illumination, and does not indicate malfunction.
- Illumination automatically turns off whenever an alarm sounds.
- Frequent use of illumination runs down the battery.

Auto light switch precautions

- The auto light switch is turned off automatically whenever battery power is at Level 3.
- Wearing the watch on the inside of your wrist, movement of your arm, or vibration of your arm can cause frequent activation of the auto light switch and illumination of the display. To avoid running down the battery, turn off the auto light switch whenever engaging in activities that might cause frequent illumination.
- Note that wearing the watch under your sleeve while the auto light switch is turned on can cause frequent illumination of the display and can run down the battery.

More than 15 degrees too high



- Illumination may not turn on if the face of the watch is more than 15 degrees above or below parallel. Make sure that the back of your hand is parallel to the ground.
- Illumination turns off after the preset illumination duration (see "To set the time and date"), even if you keep the watch pointed towards your face.
- Static electricity or magnetic force can interfere with proper operation of the auto light switch. If illumination does not turn on, try moving the watch back to the starting position (parallel with the ground) and then tilt it back towards you again. If this does not work, drop your arm all the way down so it hangs at your side, and then bring it back up again.

- Under certain conditions, illumination may not turn on until about one second after you turn the face of the watch towards you. This does not necessarily indicate malfunction of the auto light switch.
- You may notice a very faint clicking sound coming from the watch when it is shaken back and forth. This sound is caused by mechanical operation of the auto light switch, and does not indicate a problem with the watch.

City Code Table

City Code	City	GMT Differential	Other major cities in same time zone
		-11.0	Pago Pago
HNL	Honolulu	-10.0	Papeete
ANC	Anchorage	-09.0	Nome
LAX	Los Angeles	-08.0	San Francisco, Las Vegas, Vancouver, Seattle/Tacoma, Dawson City
DEN	Denver	-07.0	El Paso, Edmonton
CHI	Chicago	-06.0	Houston, Dallas/Fort Worth, New Orleans, Mexico City, Winnipeg
NYC	New York	-05.0	Montreal, Detroit, Miami, Boston, Panama City, Havana, Lima, Bogota
CCS	Caracas	-04.0	La Paz, Santiago, Port Of Spain
RIO	Rio De Janeiro	-03.0	Sao Paulo, Buenos Aires, Brasilia, Montevideo
--		-02.0	
--		-01.0	Praia
GMT		+00.0	Dublin, Lisbon, Casablanca, Dakar, Abidjan
LON	London		
PAR	Paris		
BER	Berlin	+01.0	Milan, Rome, Madrid, Amsterdam, Algiers, Hamburg, Frankfurt, Vienna, Stockholm
ATH	Athens		
CAI	Cairo	+02.0	Helsinki, Istanbul, Beirut, Damascus, Cape Town
JRS	Jerusalem		
JED	Jeddah	+03.0	Kuwait, Riyadh, Aden, Addis Ababa, Nairobi, Moscow
THR	Tehran	+03.5	Shiraz
DXB	Dubai	+04.0	Abu Dhabi, Muscat
KBL	Kabul	+04.5	
KHI	Karachi	+05.0	Male
DEL	Delhi	+05.5	Mumbai, Kolkata
DAC	Dhaka	+06.0	Colombo
RGK	Yangon	+06.5	
BKK	Bangkok	+07.0	Jakarta, Phnom Penh, Hanoi, Vientiane
HKG	Hong Kong	+08.0	Singapore, Kuala Lumpur, Beijing, Taipei, Manila, Perth, Ulaanbaatar
SEL	Seoul		
TYO	Tokyo	+09.0	Pyongyang
ADL	Adelaide	+09.5	Darwin
SYD	Sydney	+10.0	Melbourne, Guam, Rabaul
NOU	Noumea	+11.0	Port Vila
WLG	Wellington	+12.0	Christchurch, Nadi, Nauru Island

- Based on data as of June 2004.